
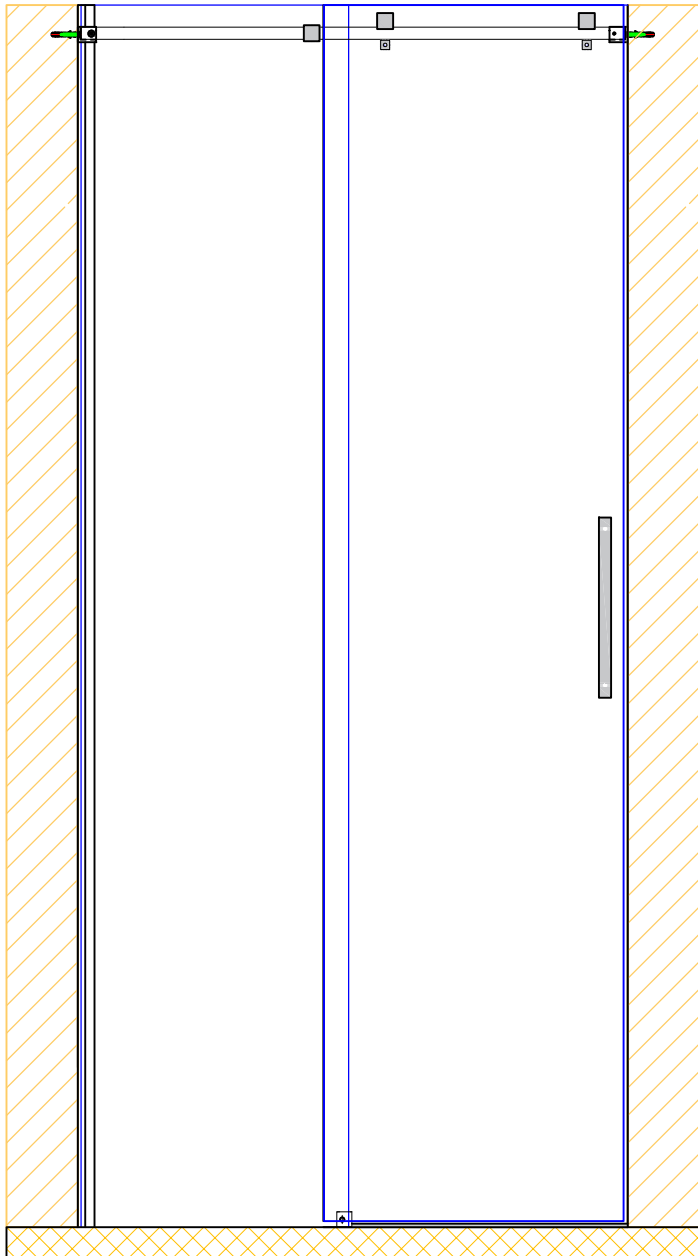
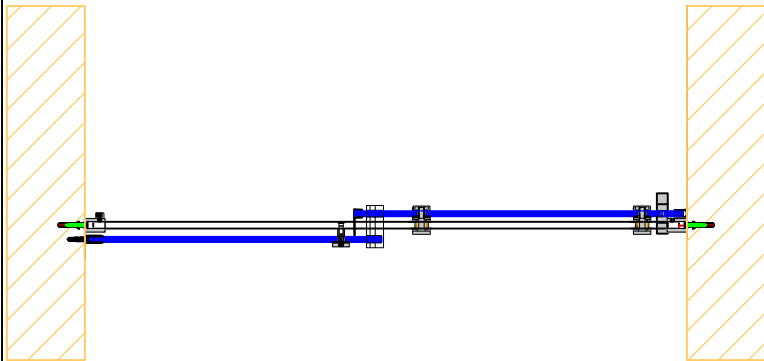








NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1




DRSNA KABINA sestavni deli

DEL	KOS	ŠIFRA
VIJAK 4,8×45 	2	A
VIJAK 3,9×38 	3	B
PVC VLOŽEK 	5	C
VIJAK M4×4 	1	D
VIJAK M4×10 	1	E
PVC NAVOJNI ZATIČ M8×10 	4	F
MEHURČEK 	1	G
PVC TESNILO GO-0 	1	H
AP 8077 	1	I
STENSKI PROFIL 	1	J
ROCAJ DIONA 	1	K
DEL 1 	1	L
DEL 1 zrc 	1	M
DEL 2 	1	N
DEL 16 	1	O
KOLEŠČEK 	2	X
OMEJEVALEC KOLEŠČKA 	2	Y
NOSILEC CEVI 	1	Z


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1

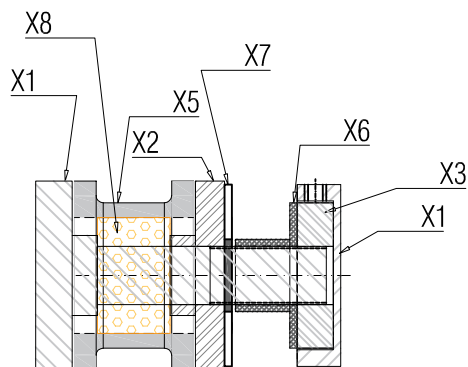


KOLEŠČEK [X]

DEL	KOS	ŠIFRA
DEL 3	1	X1
DEL 4	1	X2
DEL 5	1	X3
DEL 7	1	X4
DEL 13	1	X5
DEL 14	1	X6
DEL 17	1	X7
LEŽAJ	2	X8
VIJAK M3×3	1	X9

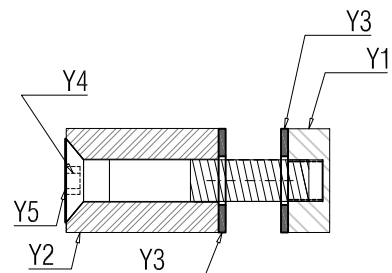

OMEJEVALEC KOLEŠČKA [Y]

DEL	KOS	ŠIFRA
DEL 6	1	Y1
DEL 10	1	Y2
DEL 18	2	Y3
VIJAK M6×35	1	Y4
PVC KAPA	1	Y5

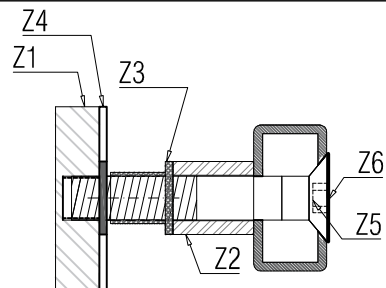


NOSILEC CEVI [Z]

DEL	KOS	ŠIFRA
DEL 8	1	Z1
DEL 9	1	Z2
DEL 15	1	Z3
DEL 17	3	Z4
VIJAK M6×35	3	Z5
PVC KAPA	1	Z6


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1



1.

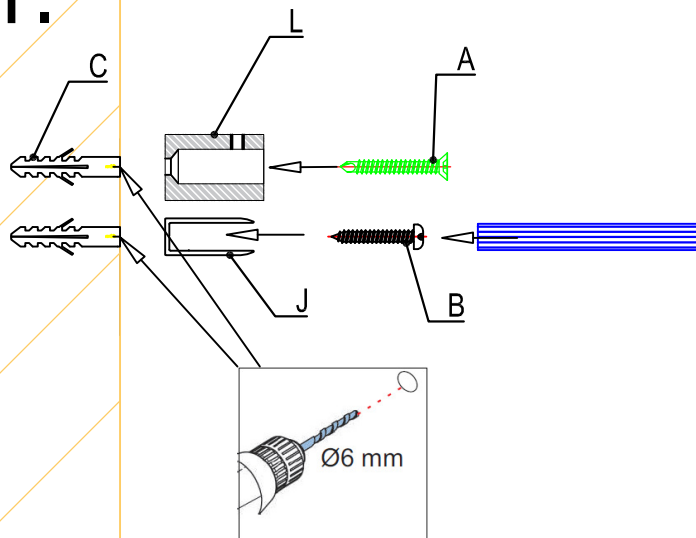


2.

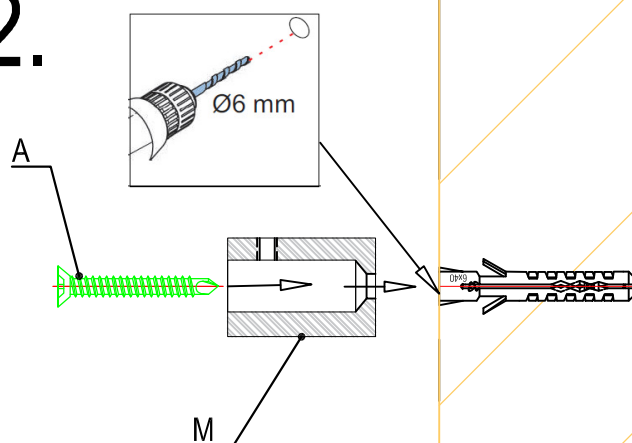

1.1.

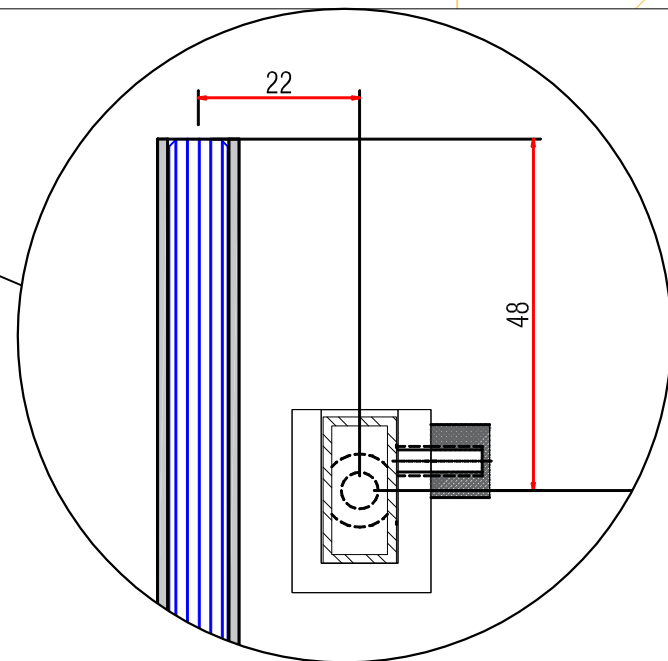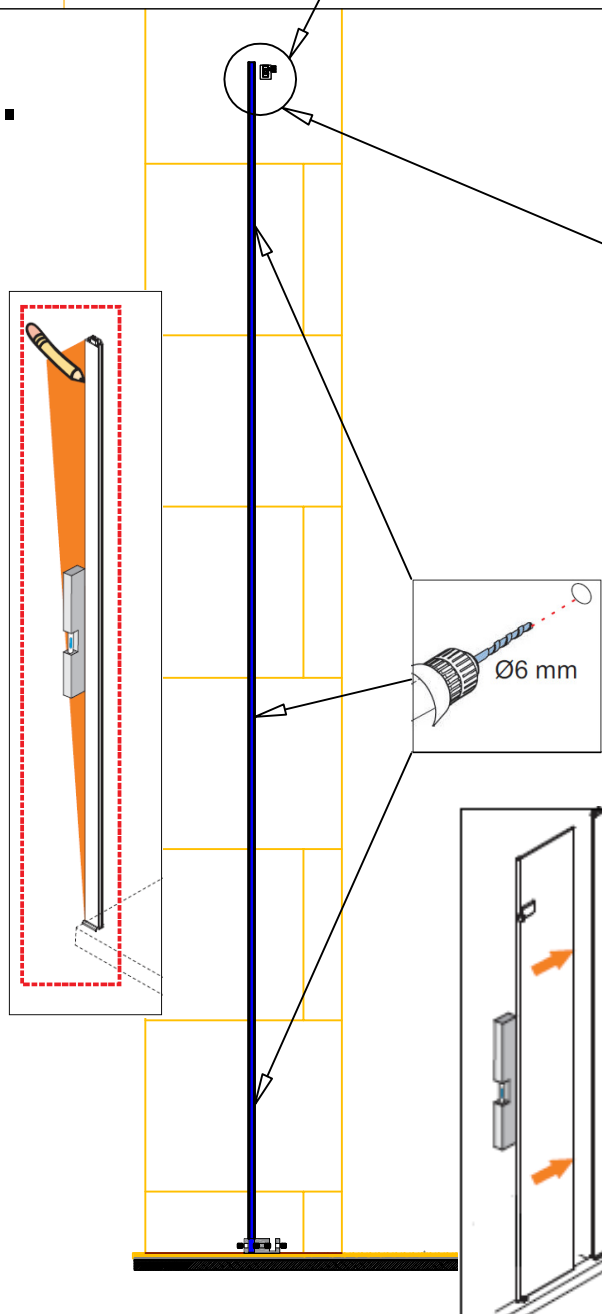




3.

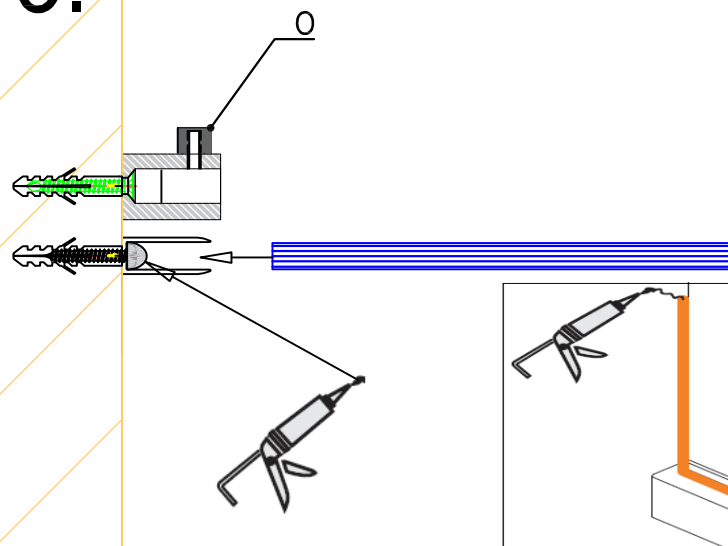


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1


4.

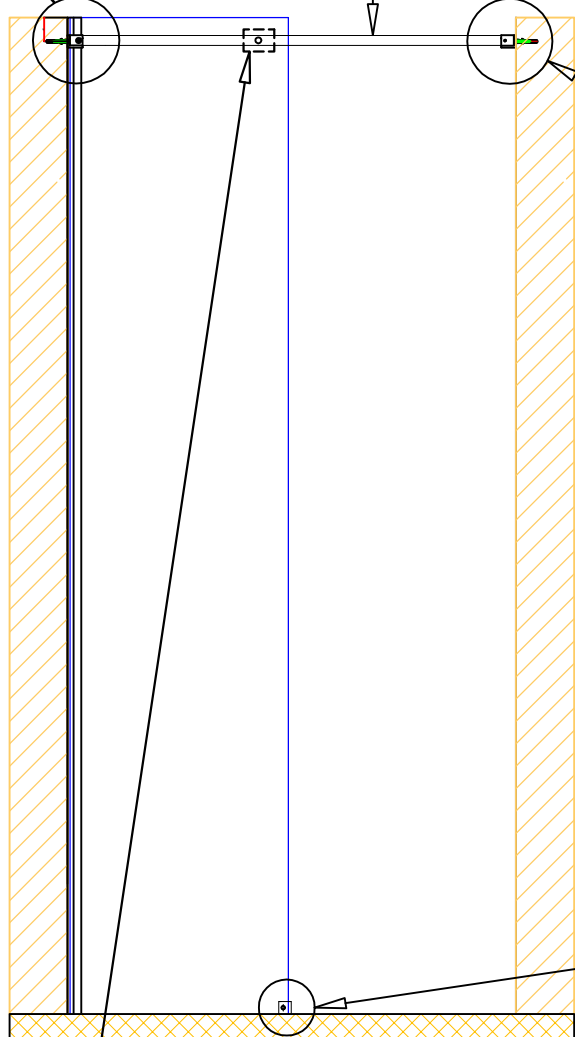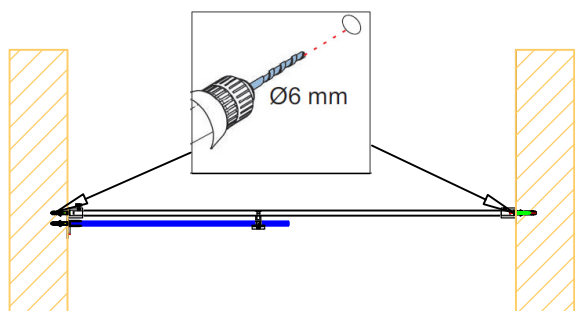


4.3.

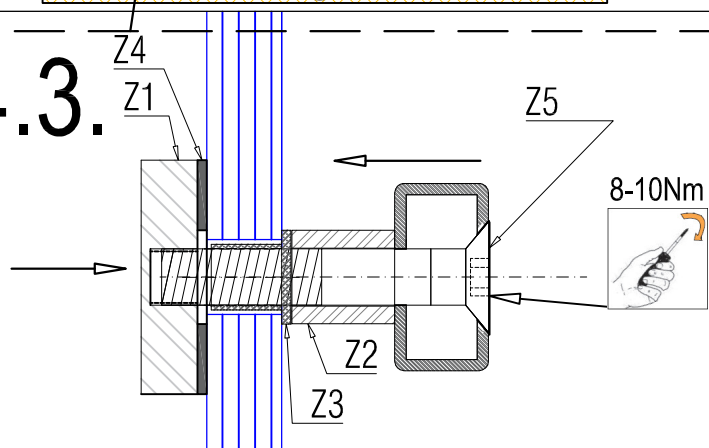


4.1.

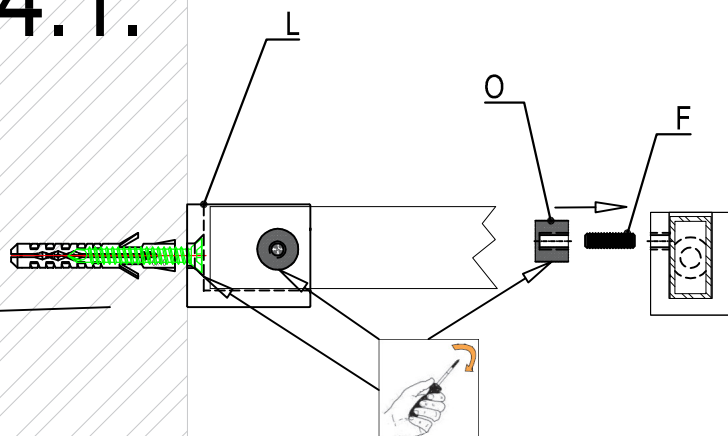

4.2.


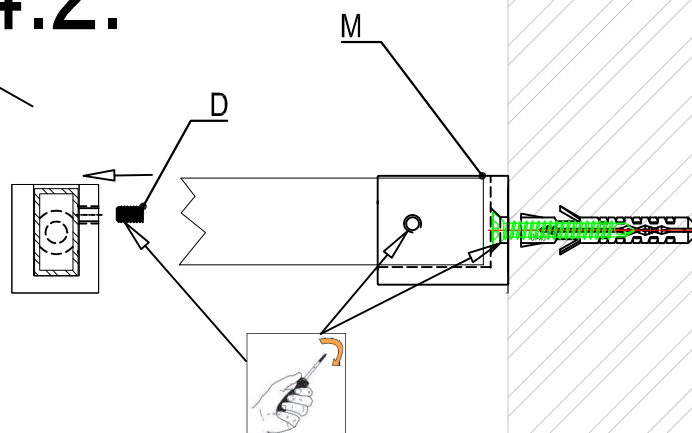


4.4.

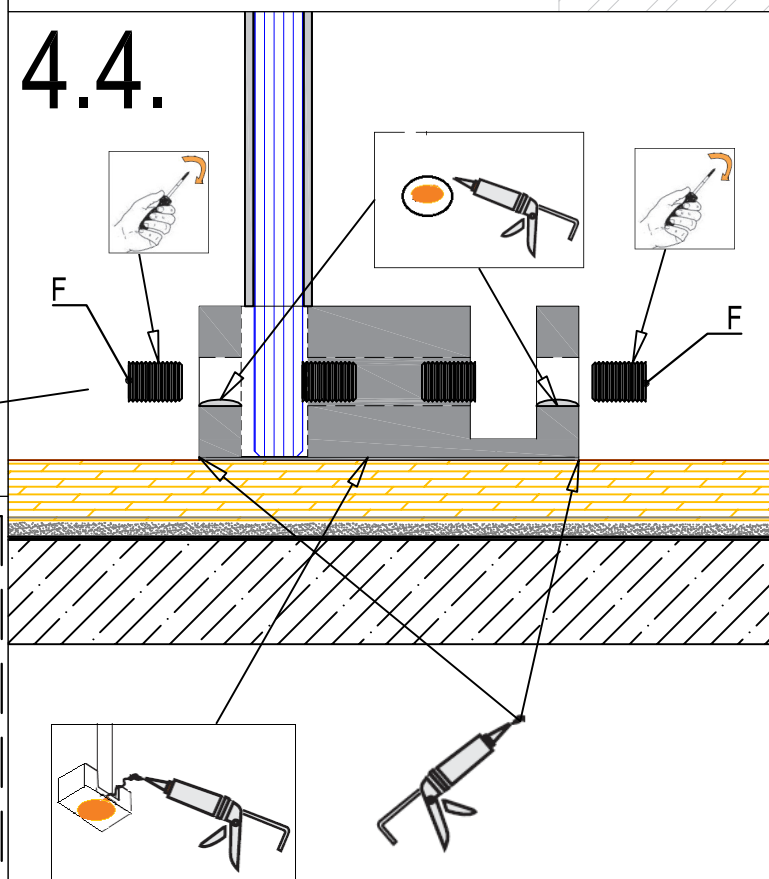


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1

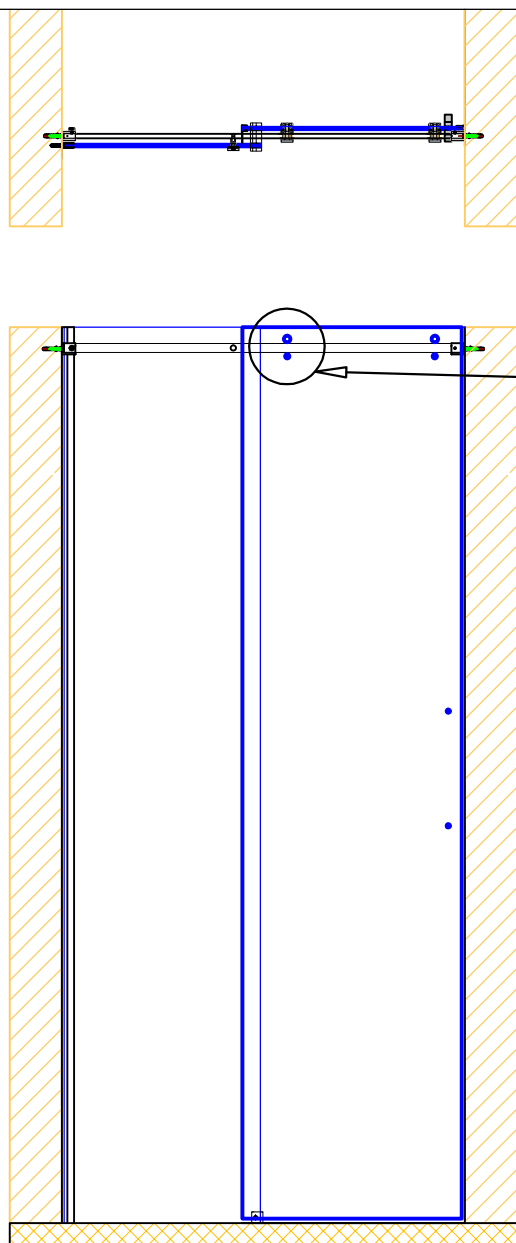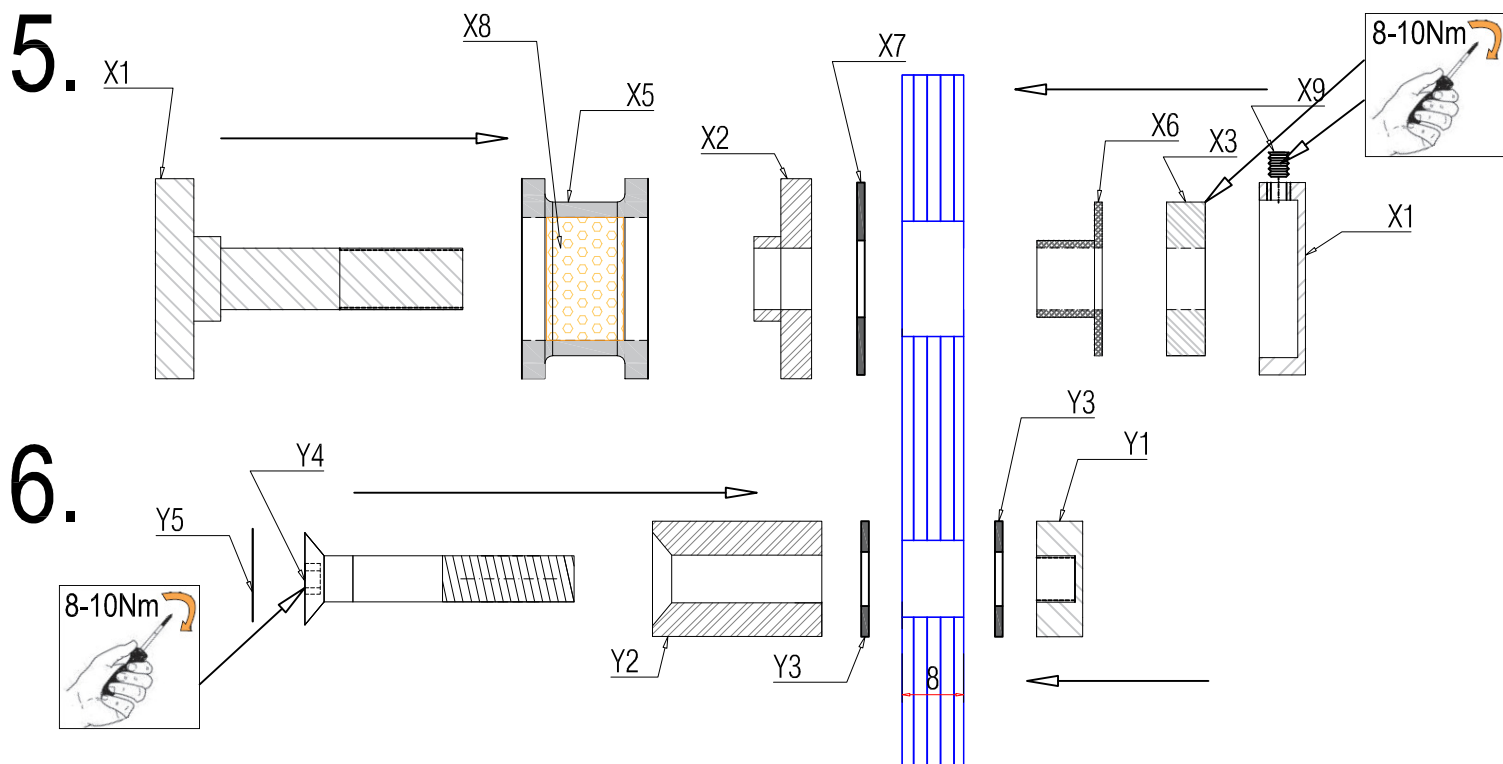





7.

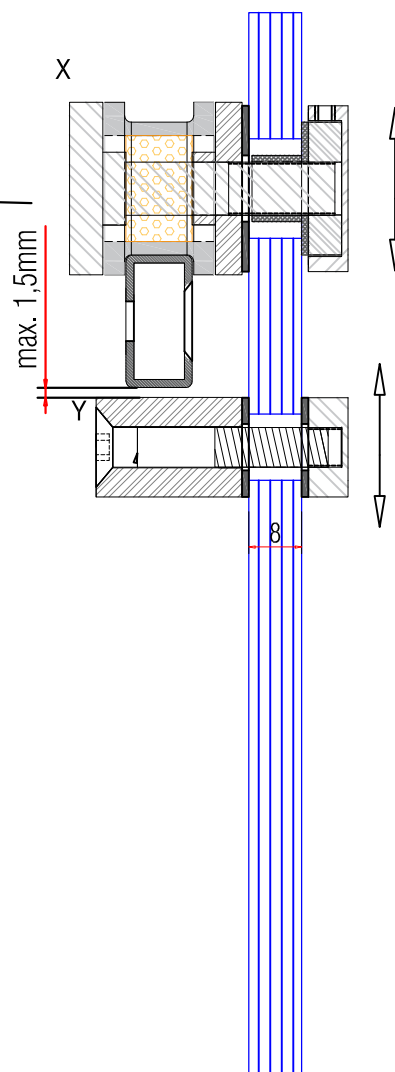

NAVODILO ZA MONTAŽO DRSNE KABINE



Kaja 1

8.

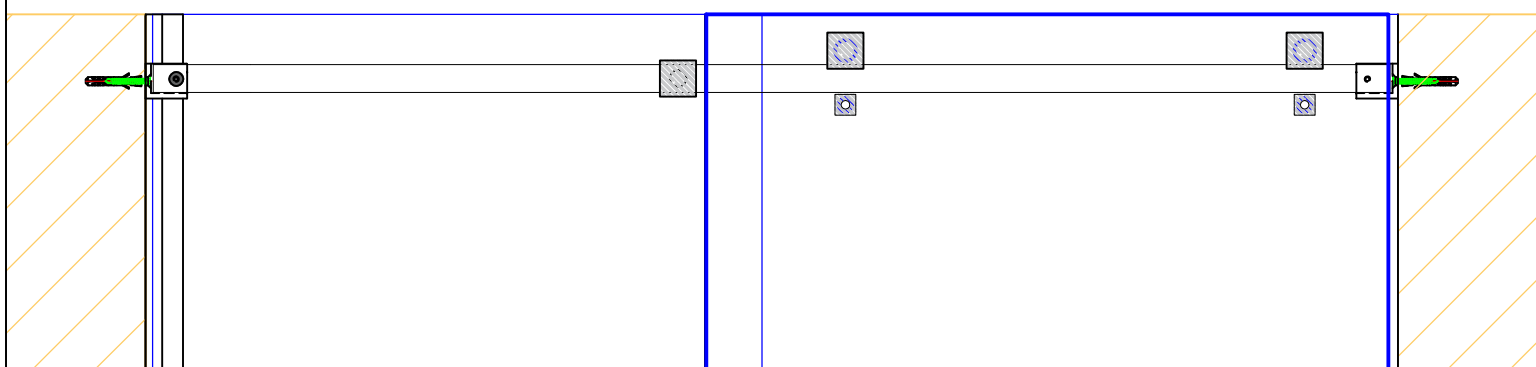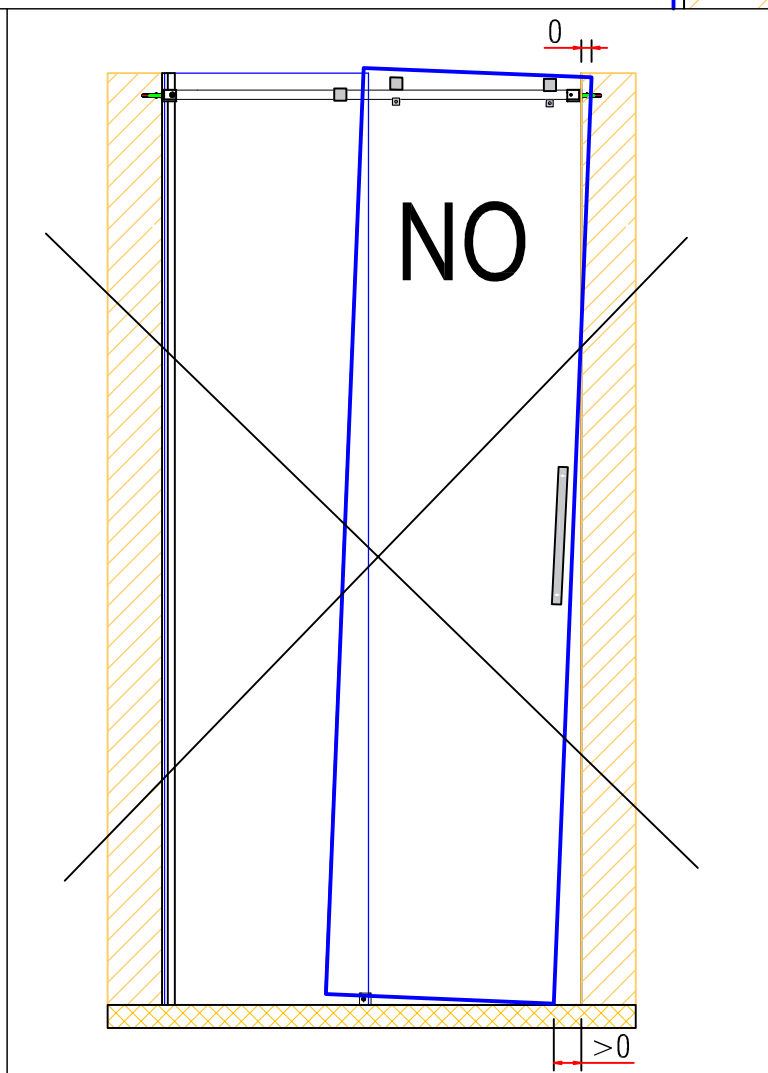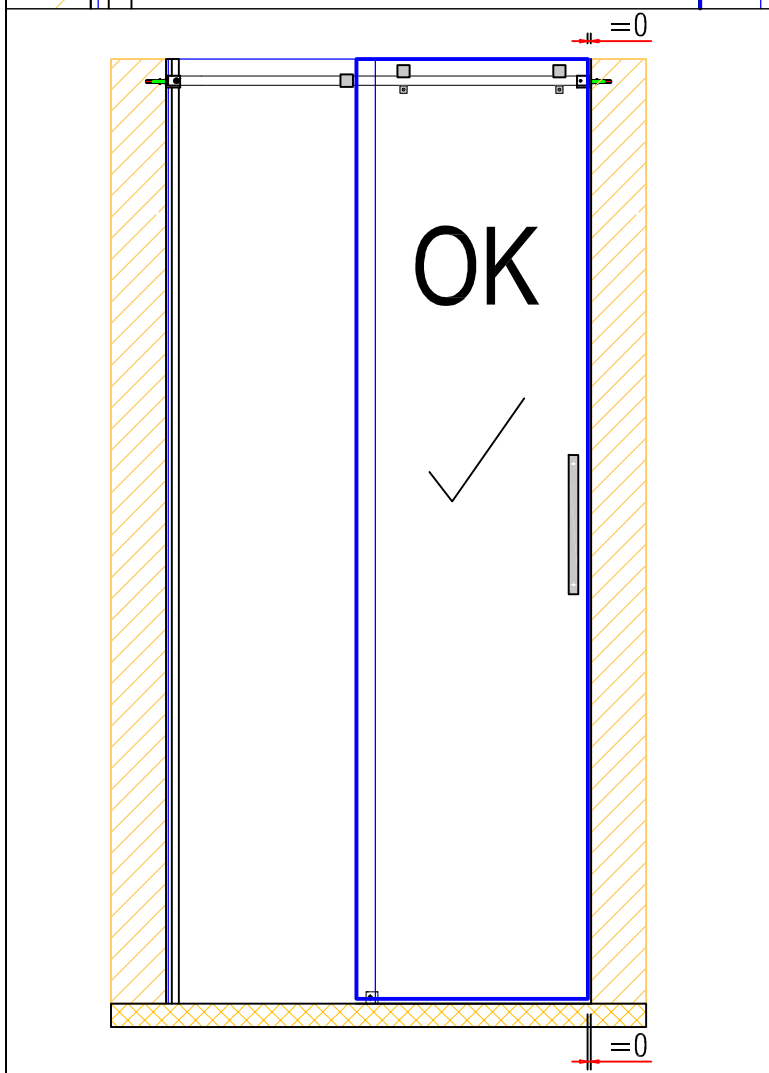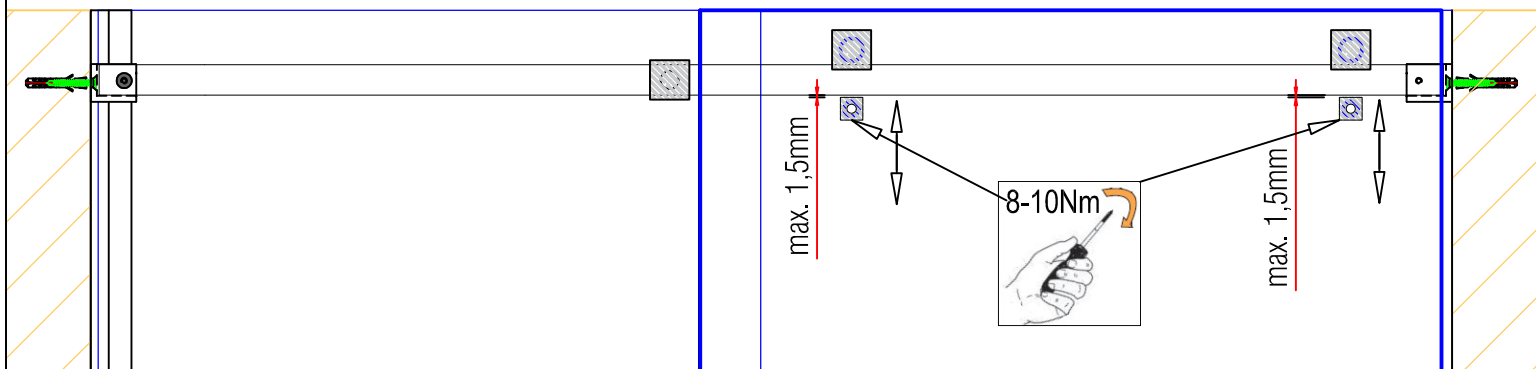


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 1

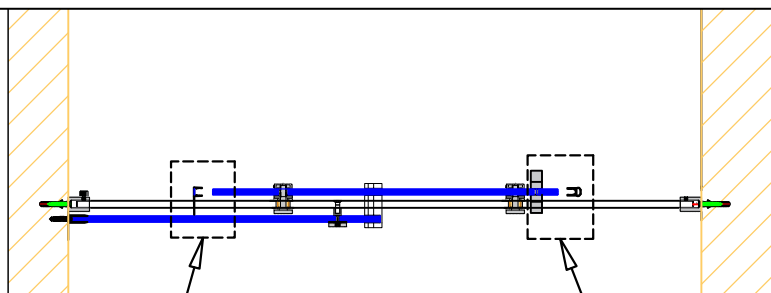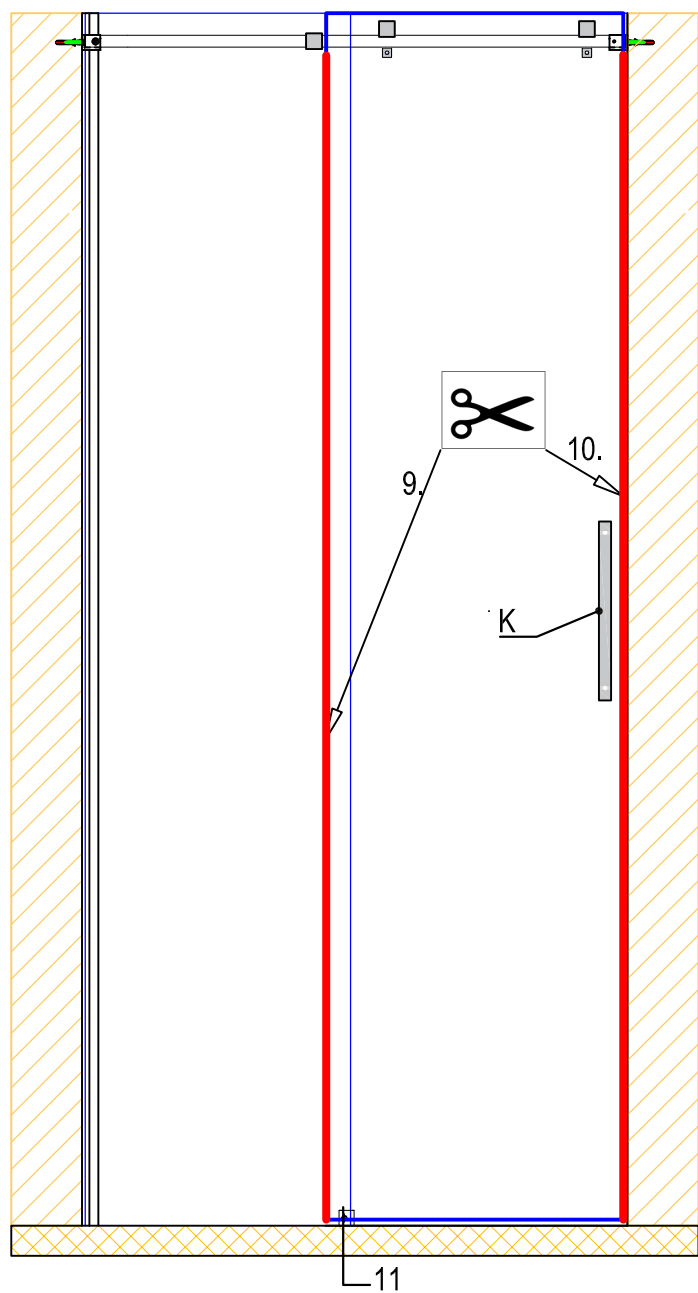


9.


10.

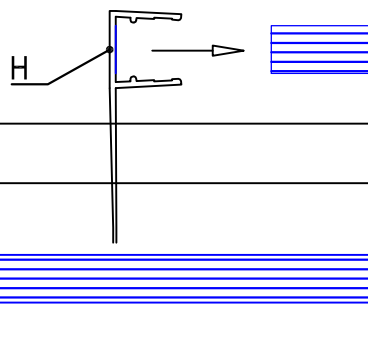


12.

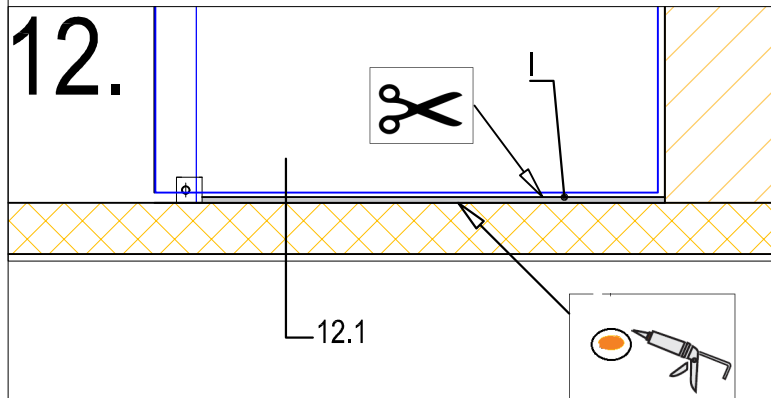

11.


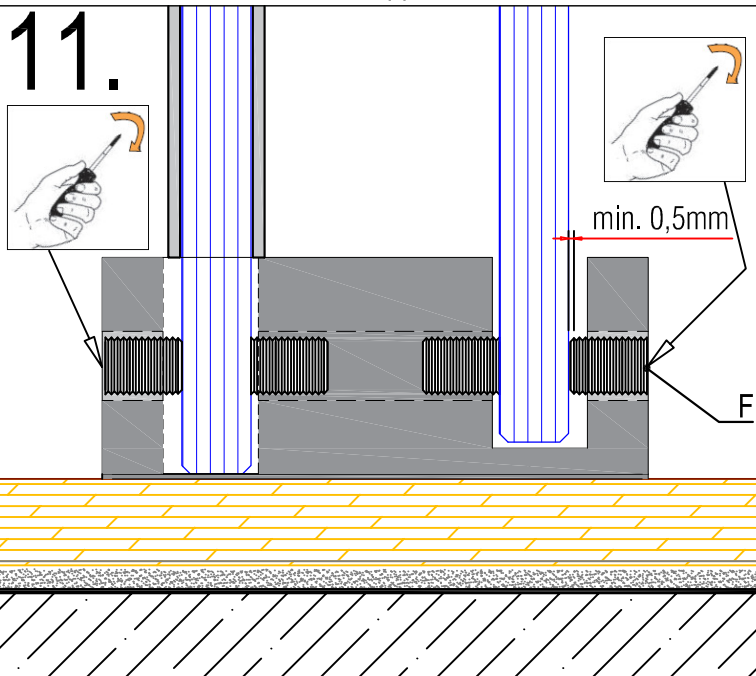


12.1

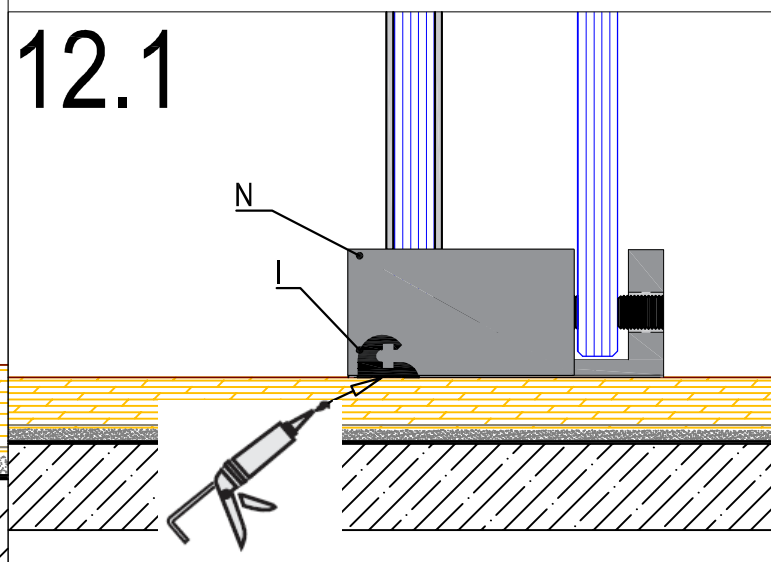

NAVODILO ZA MONTAŽO DRSNE KABINE


Kaja 2

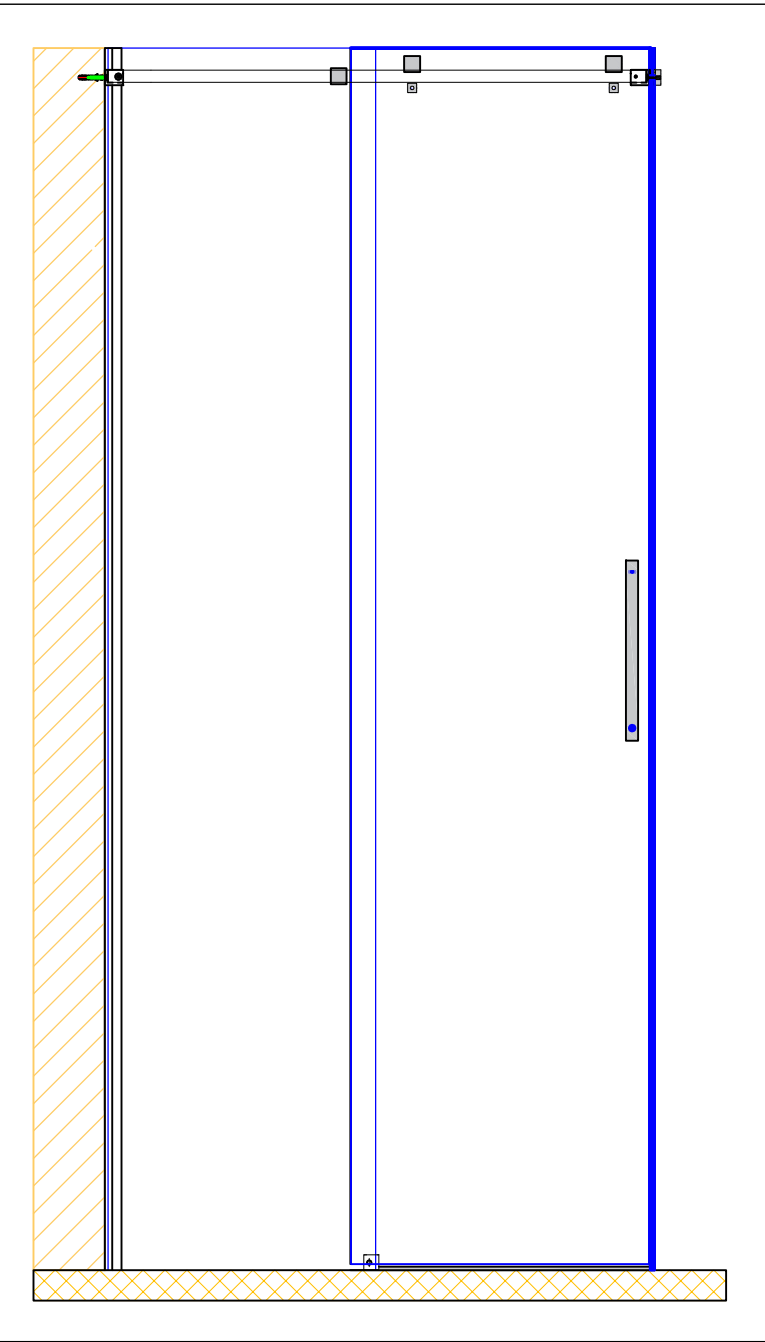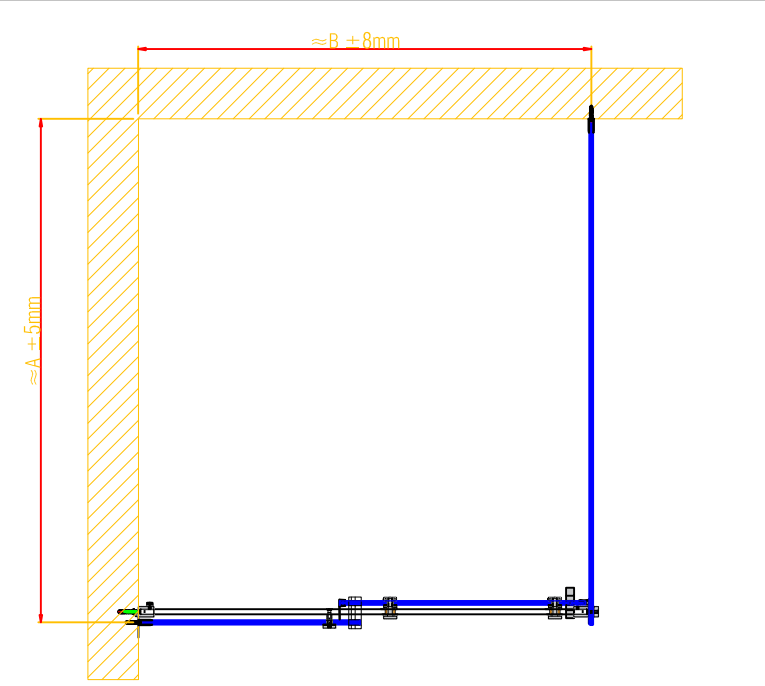

DRSNA KABINA sestavni deli		
DEL	KOS	ŠIFRA
VIJAK 4,8×45	1	A
VIJAK 3,9×38	6	B
PVC VLOŽEK	7	C
VIJAK M4×4	1	D
VIJAK M4×10	1	E
PVC NAVOJNI ZATIČ M8×10	4	F
MEHURČEK	1	G
PVC TESNILO GO-0	1	H
AP 8077	1	I
STENSKI PROFIL	2	J
ROČAJ DIONA	1	K
DEL 1	1	L
DEL 1 zrc	1	M
DEL 2	1	N
DEL 16	1	O
DEL 11	1	P
DEL 19	2	R
VIJAK M5×20	1	S
KOLEŠČEK	2	X
OMEJEVALEC KOLEŠČKA	2	Y
NOSILEC CEVI	1	Z


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 2

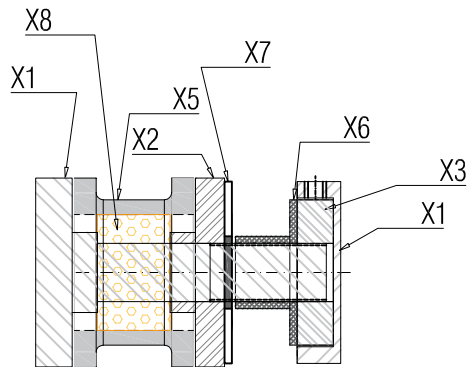


KOLEŠČEK [X]

DEL	KOS	ŠIFRA
DEL 3	1	X1
DEL 4	1	X2
DEL 5	1	X3
DEL 7	1	X4
DEL 13	1	X5
DEL 14	1	X6
DEL 17	1	X7
LEŽAJ	2	X8
VIJAK M3×3	1	X9

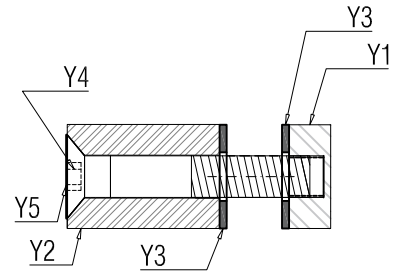

OMEJEVALEC KOLEŠČKA [Y]

DEL	KOS	ŠIFRA
DEL 6	1	Y1
DEL 10	1	Y2
DEL 18	2	Y3
VIJAK M6×35	1	Y4
PVC KAPA	1	Y5

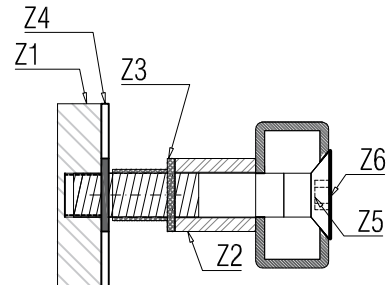


NOSILEC CEVI [Z]

DEL	KOS	ŠIFRA
DEL 8	1	Z1
DEL 9	1	Z2
DEL 15	1	Z3
DEL 17	3	Z4
VIJAK M6×35	3	Z5
PVC KAPA	1	Z6


NAVODILO ZA MONTAŽO DRSNE KABIN

Kaja 2


1.

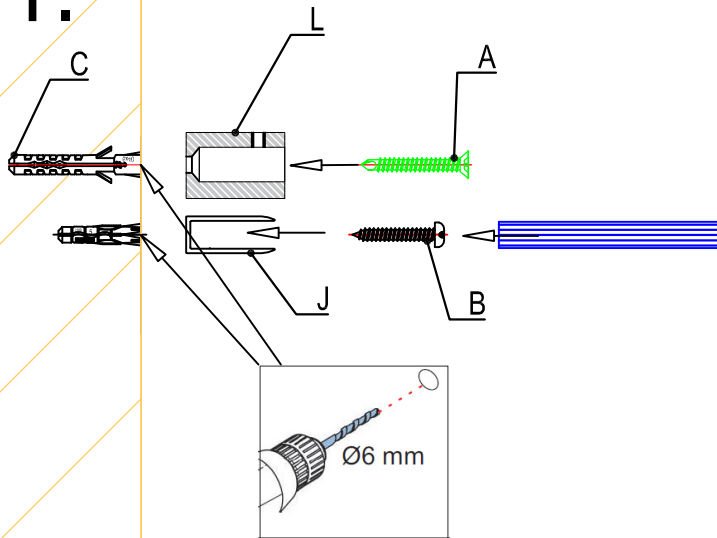


2.

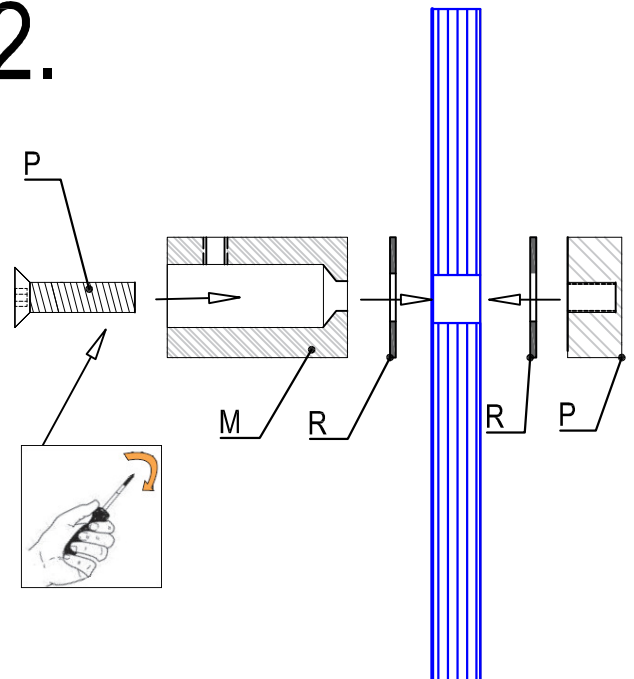


1.1.

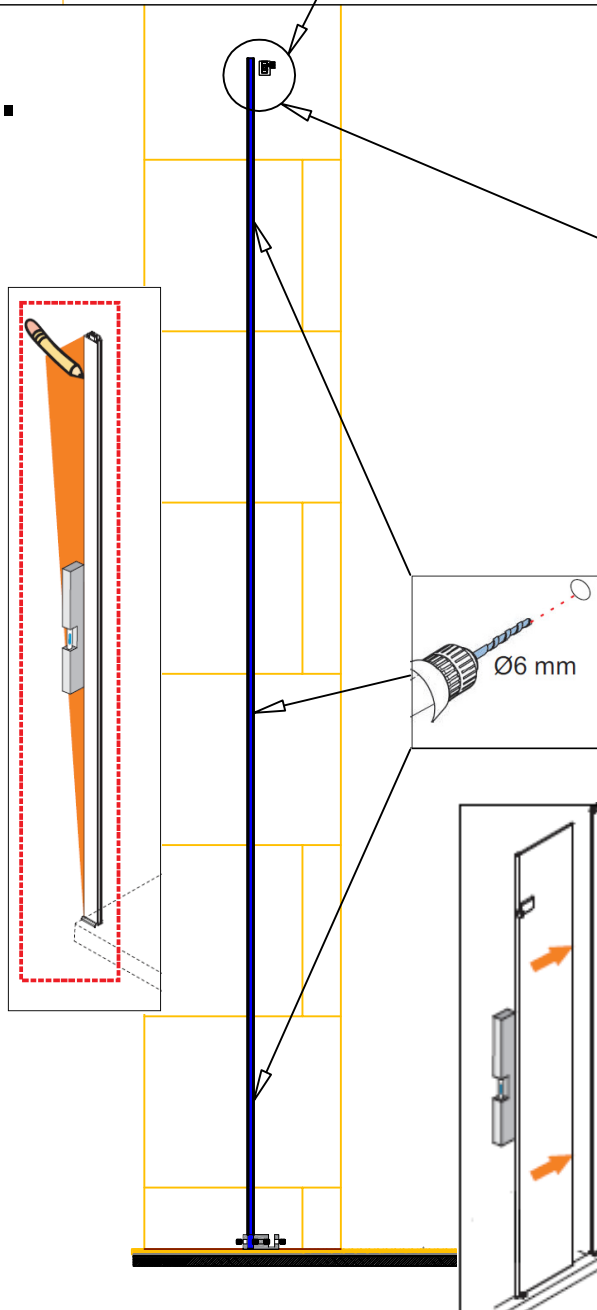

3.

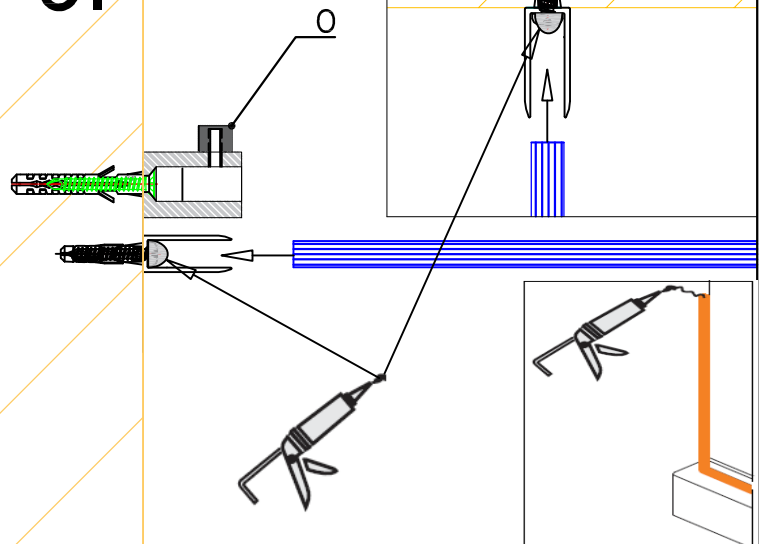

3.1






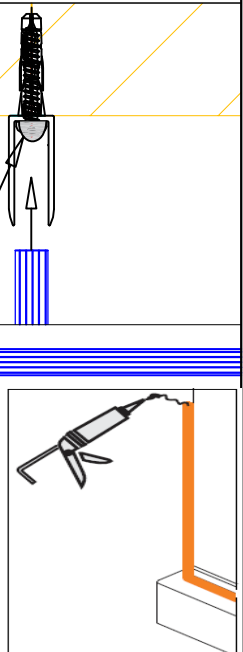


22

48

NAVODILO ZA MONTAŽO DRSNE KABINE


Kaja 2

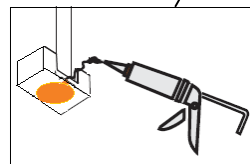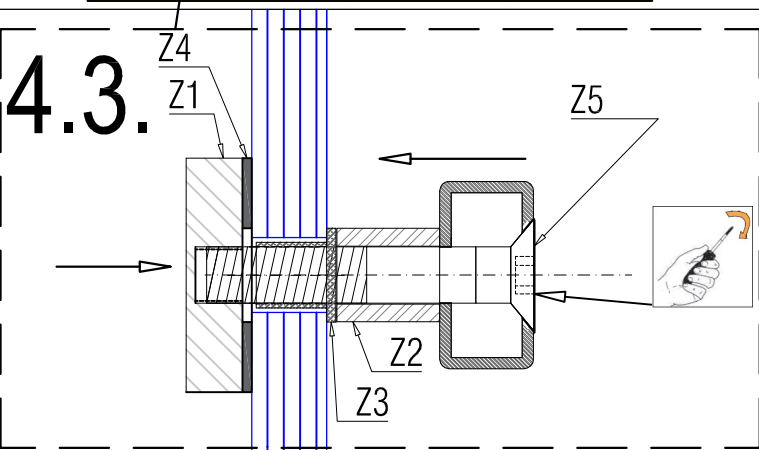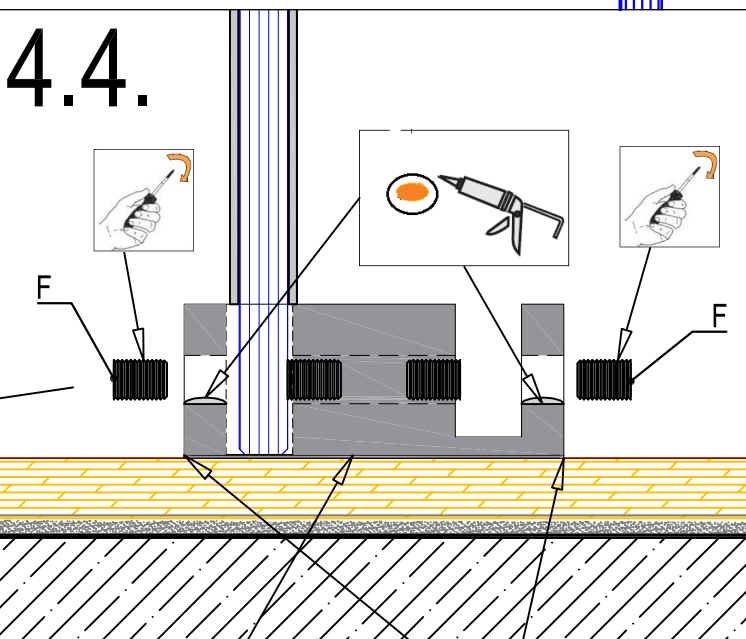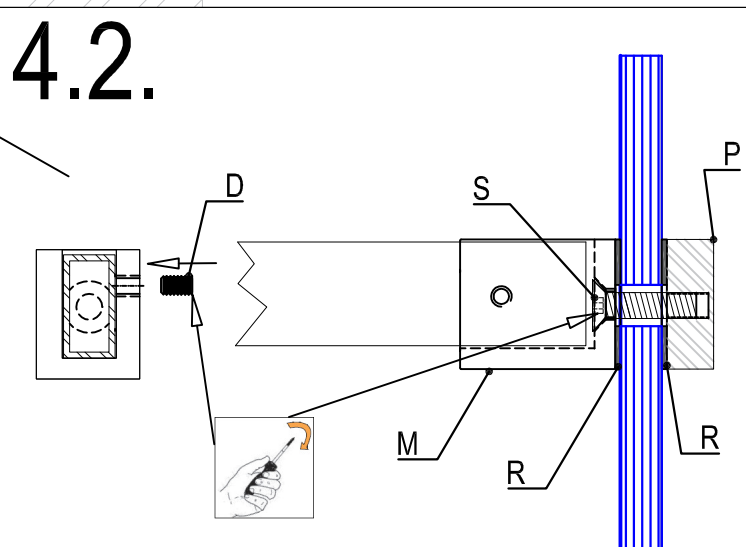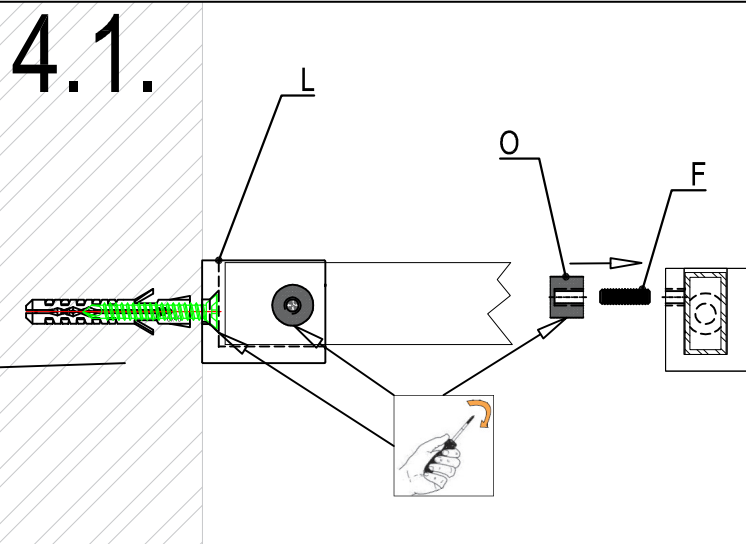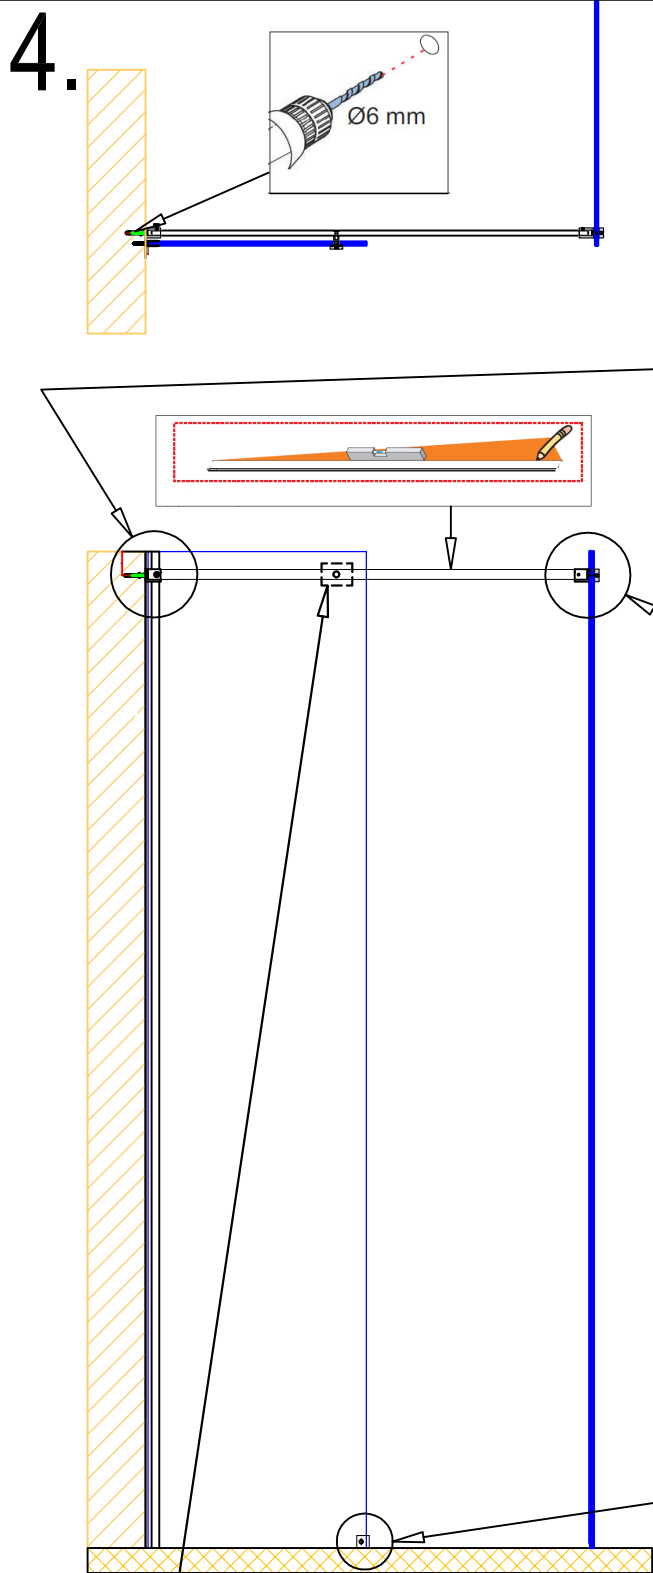


NAVODILO ZA MONTAŽO DRSNE KABINE

Kaja 2



5

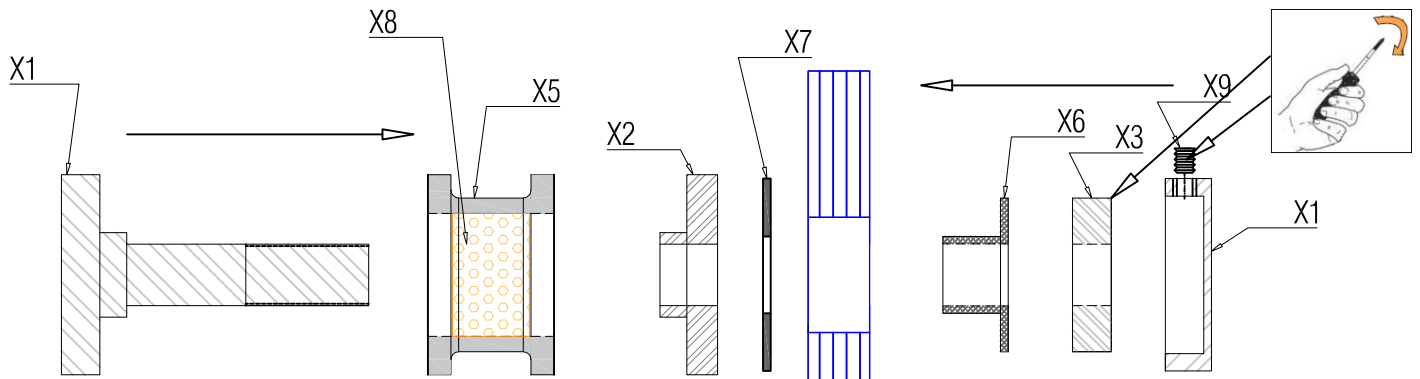

6.

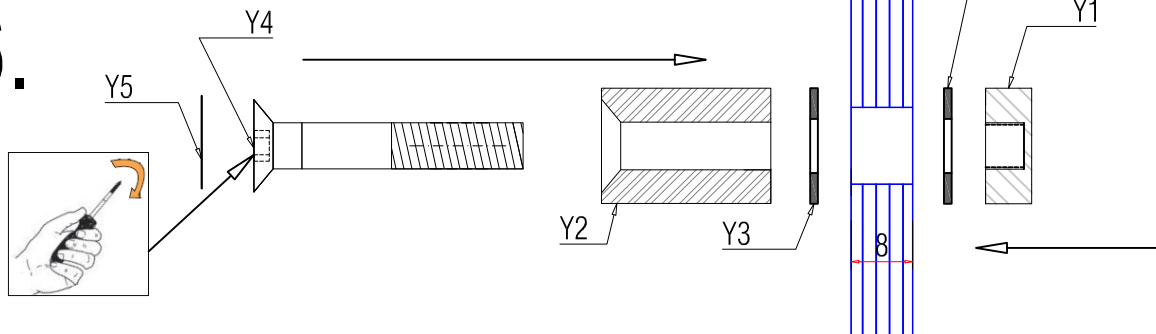





7.

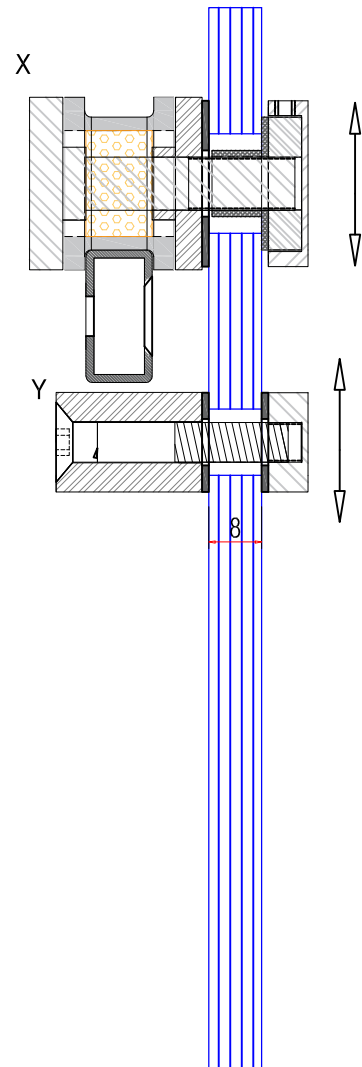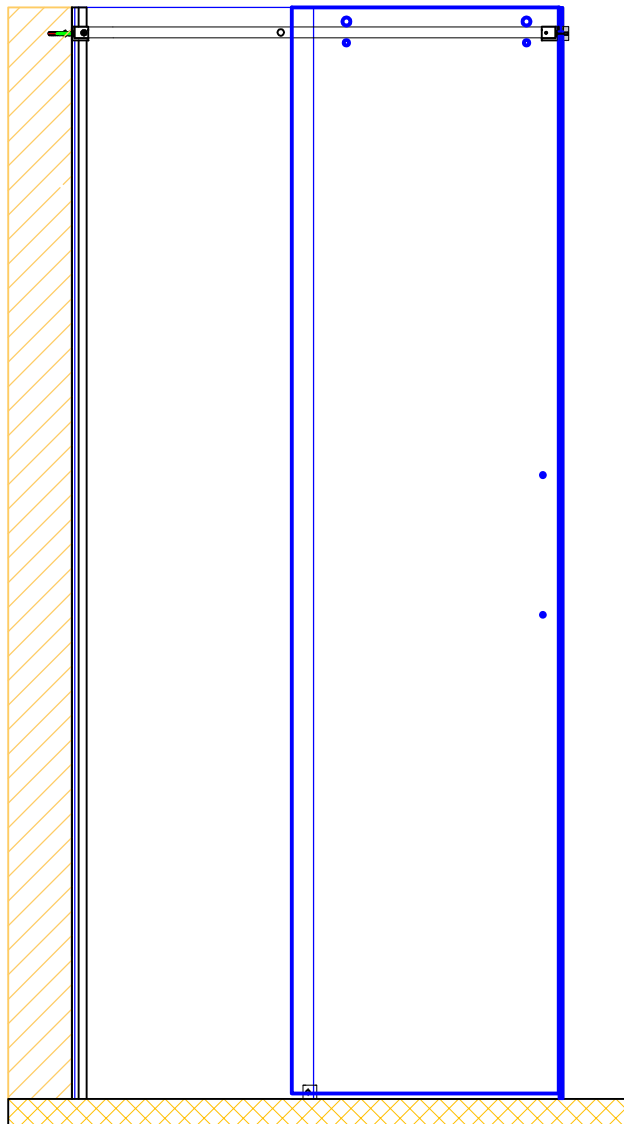

NAVODILO ZA MONTAŽO DRSNE KABINE



Kaja 2

8.

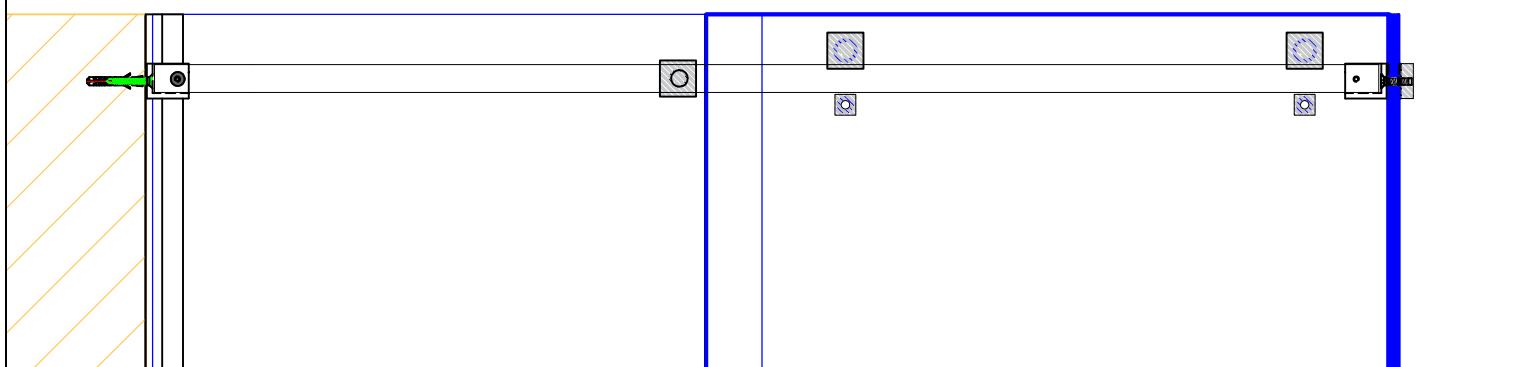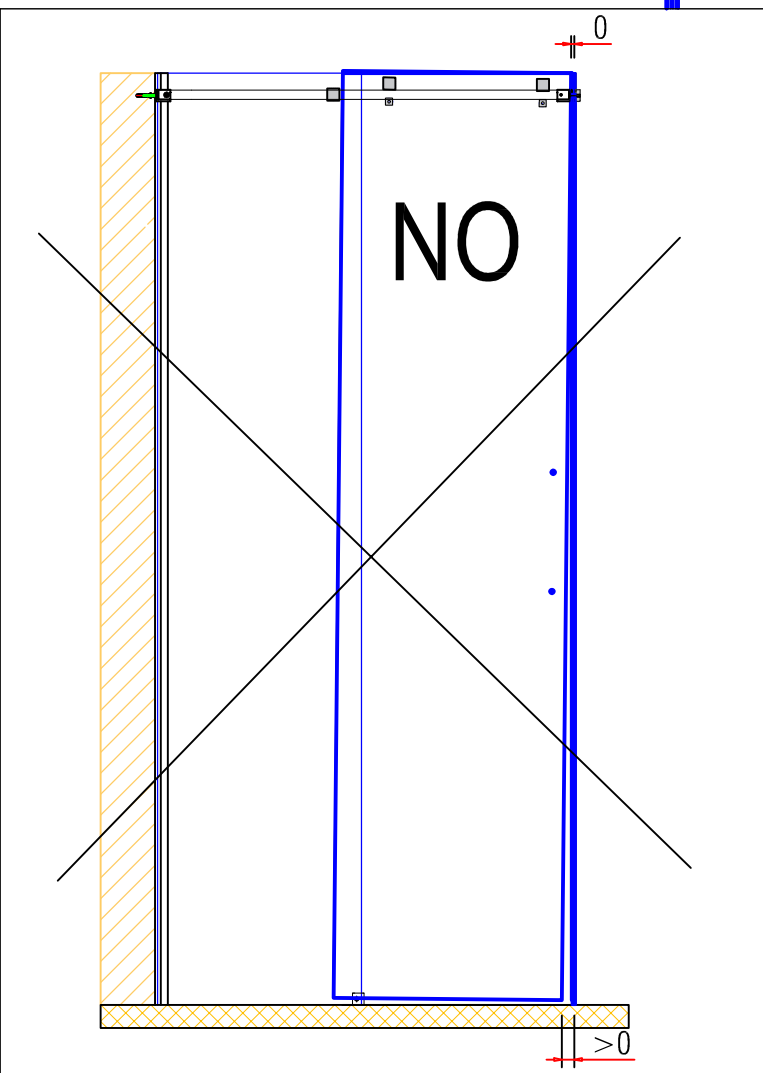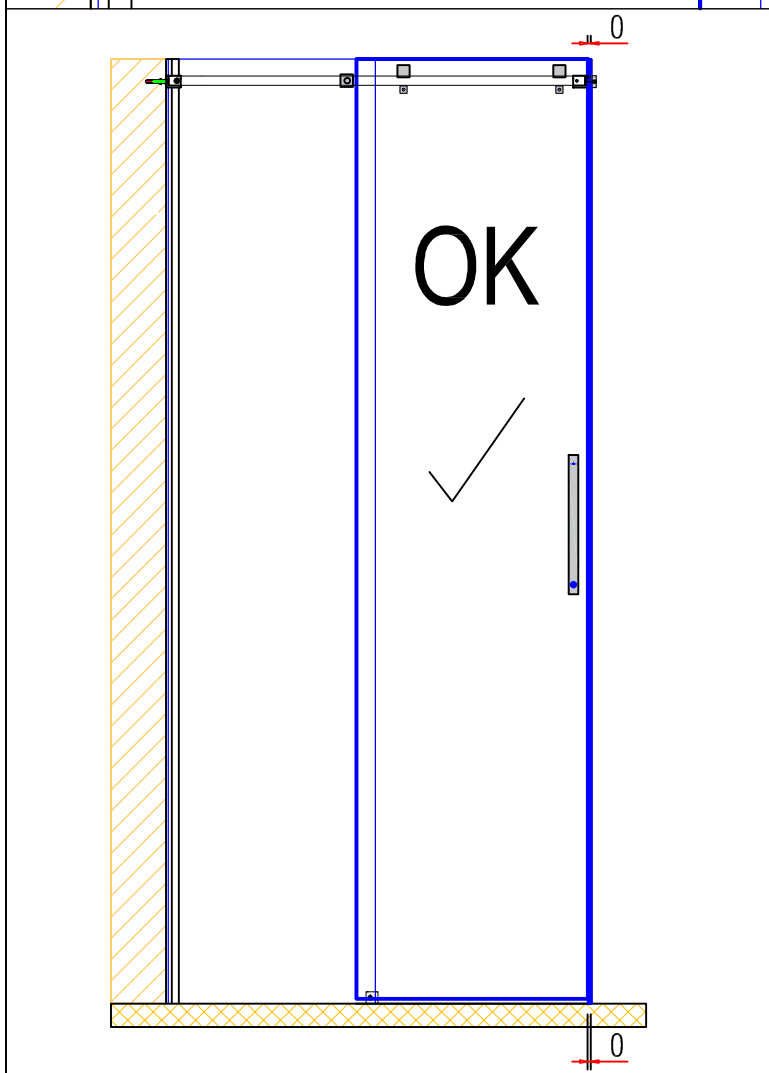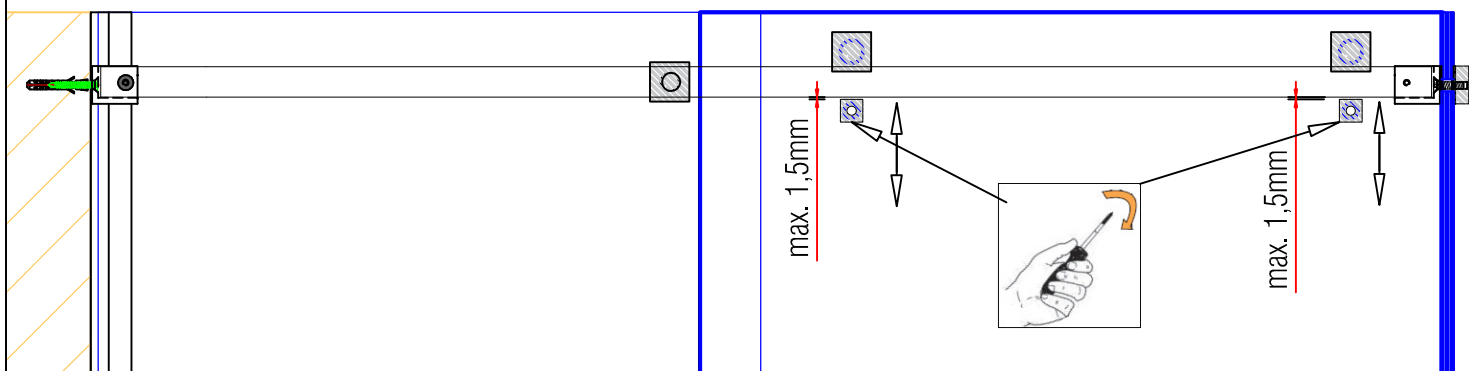


NAVODILO ZA MONTAŽO DRSNE KABINE


Kaja 2

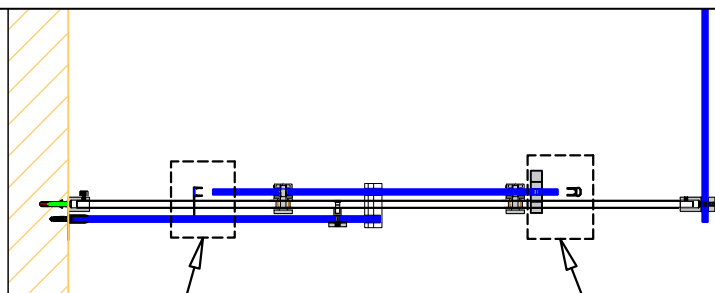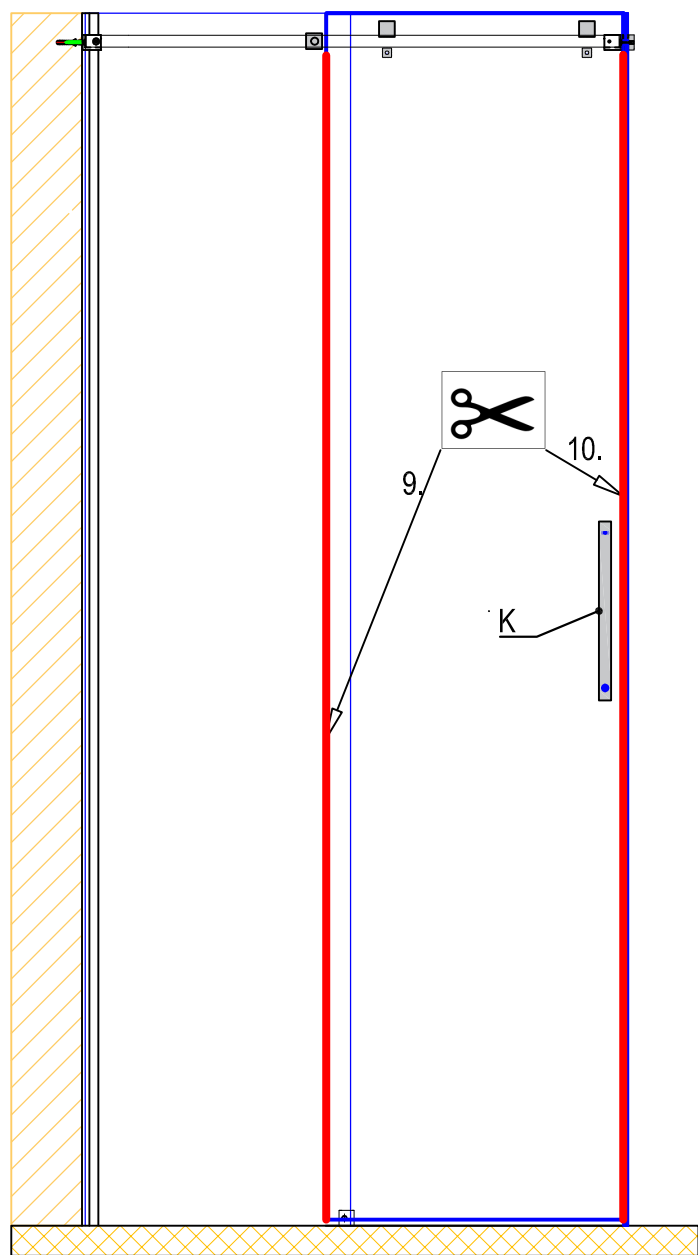


9.

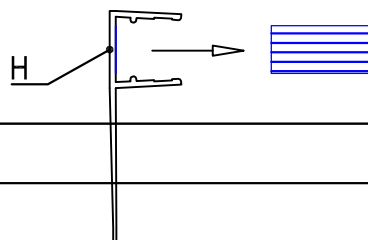


10.

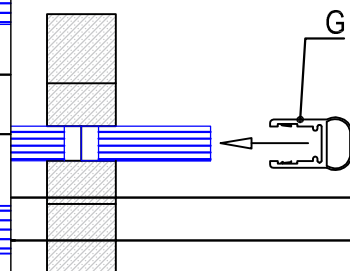

12.

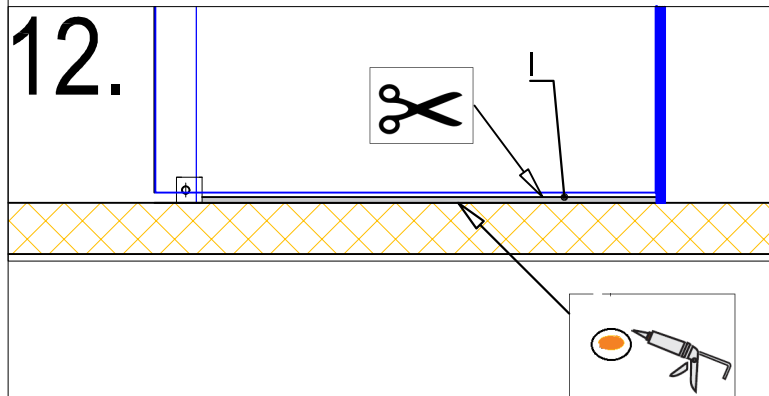

11.

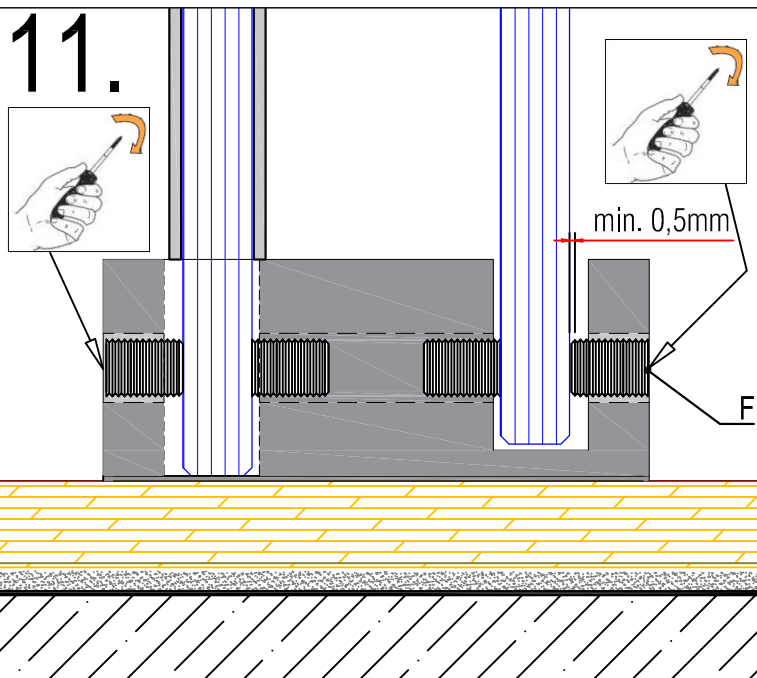

12.1

