

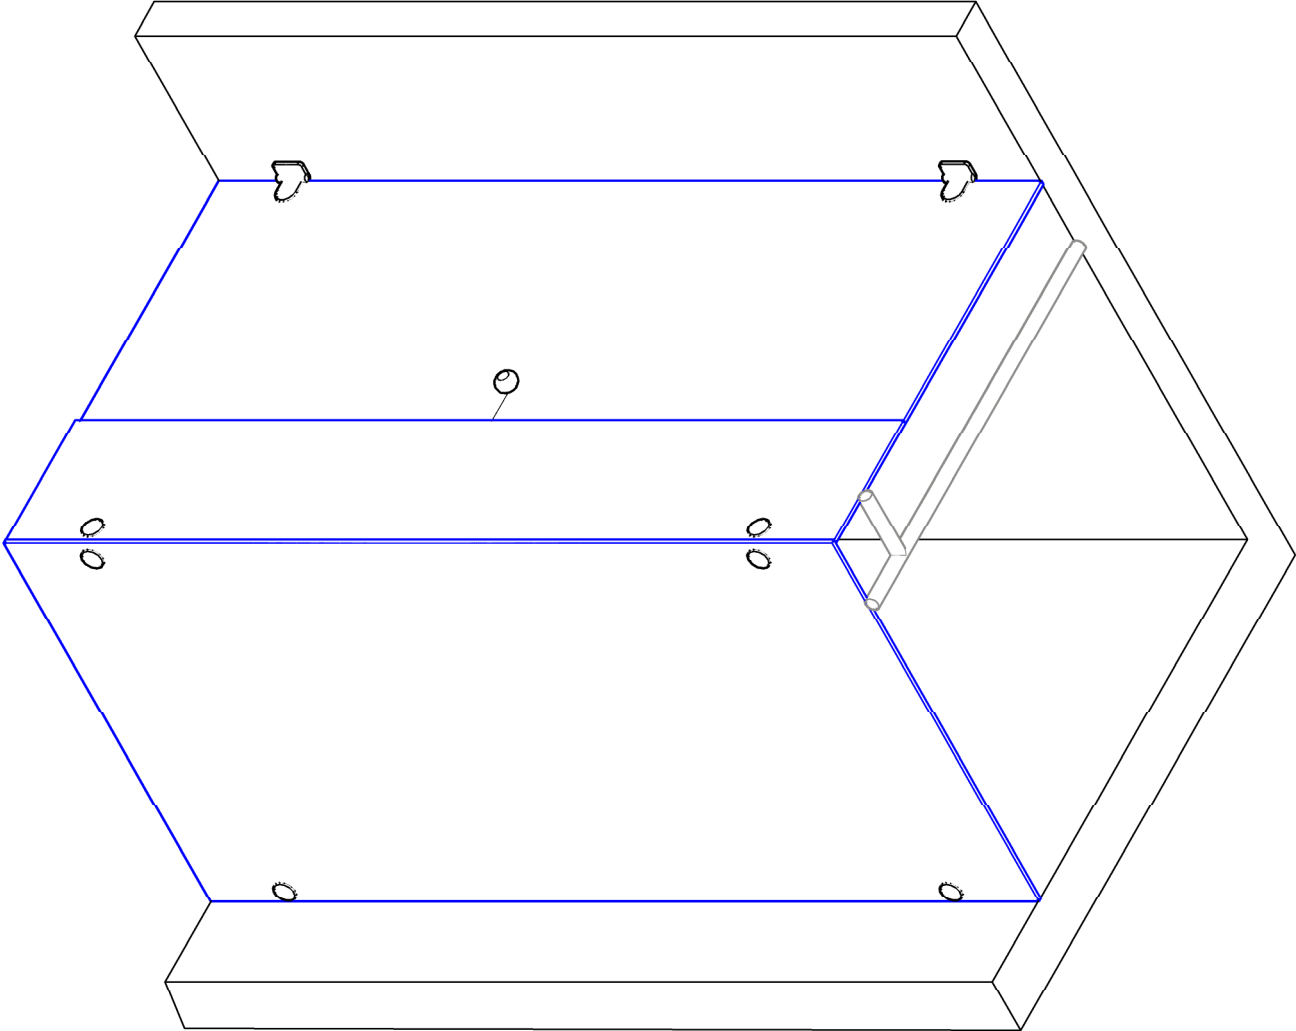



Navodilo za montažo TAI 3

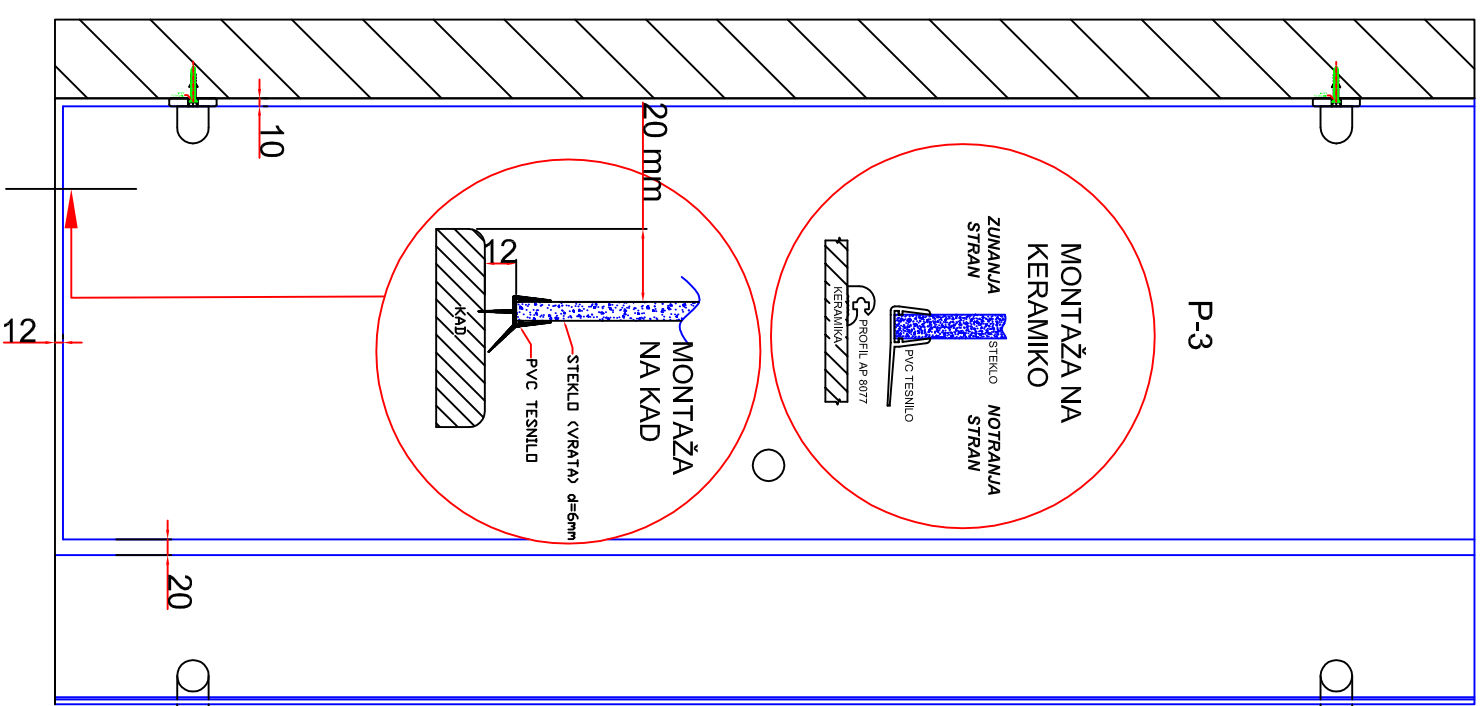






L-700 TAI		
	3	KOS
	7	KOS
	7	KOS
	3	KOS
	3	KOS
	3	KOS
	3	KOS
	1	KOS
	2	KOS
	2	KOS

Navodilo za montažo TAI 3


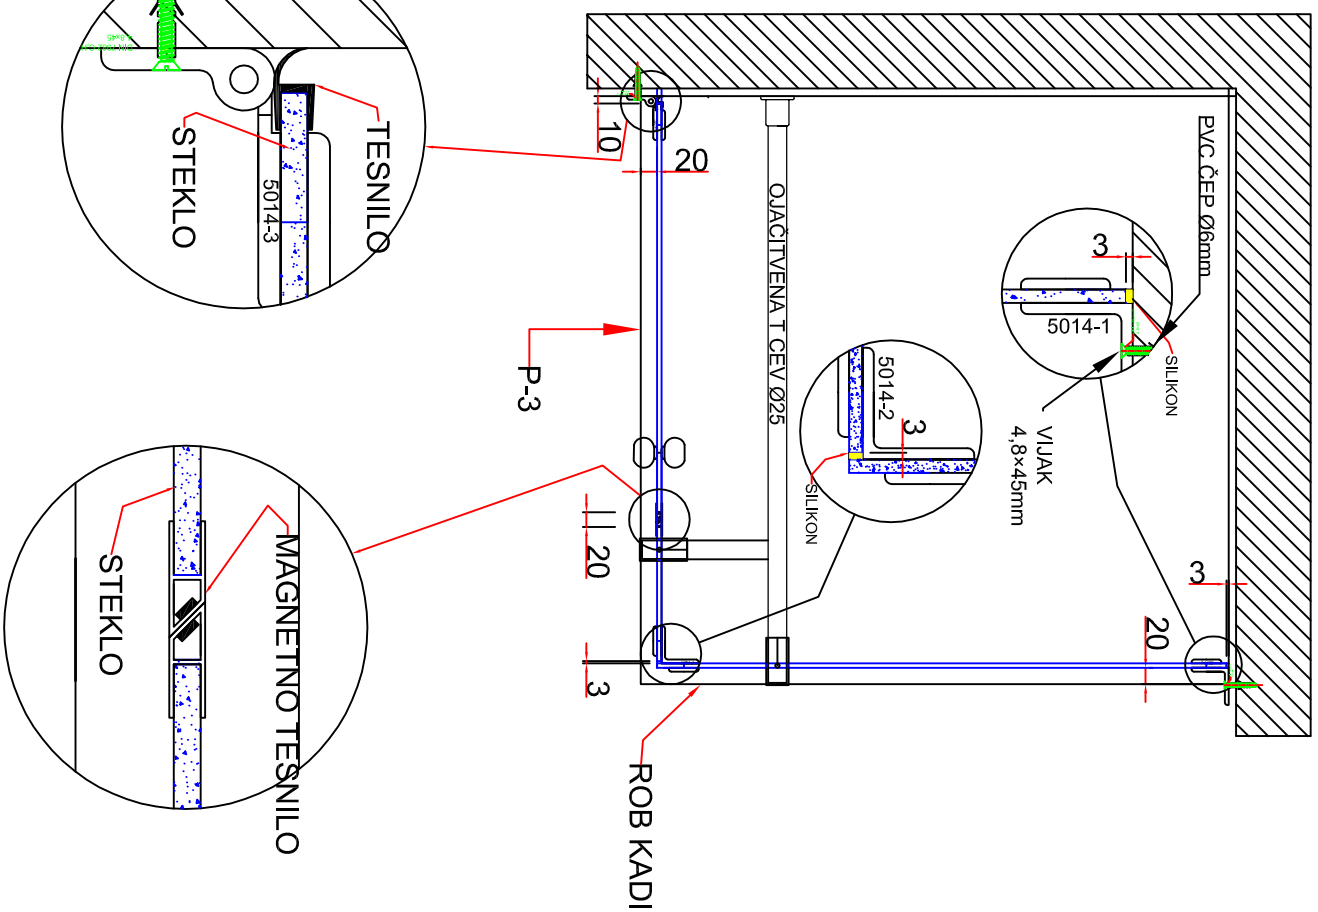


Navodilo za montažo **TAI 4**

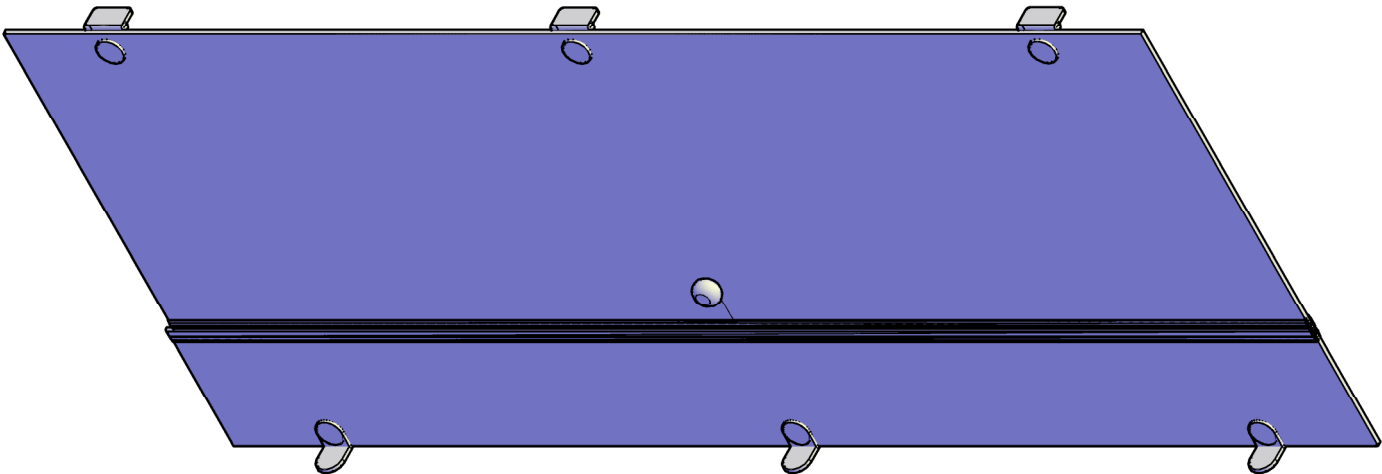



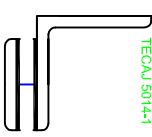
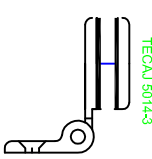

L-700 TAI		
 VITAK 4.8x45	7	KOS
 PVC VLOŽEK Ø6	7	KOS
 TEČAJ 5014-1	3	KOS
 TEČAJ 5014-3	3	KOS
 ROČAJ	1	KOS

Navodilo za montažo TAI 4

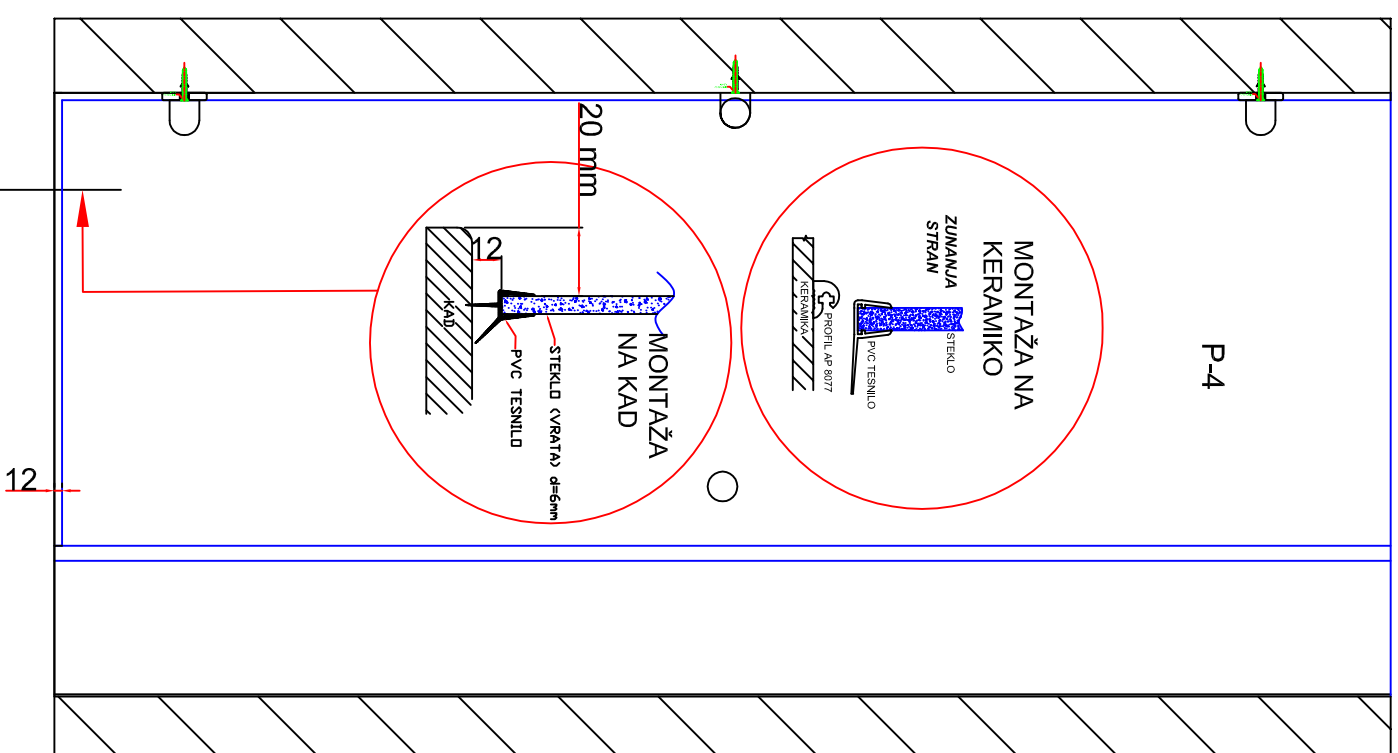
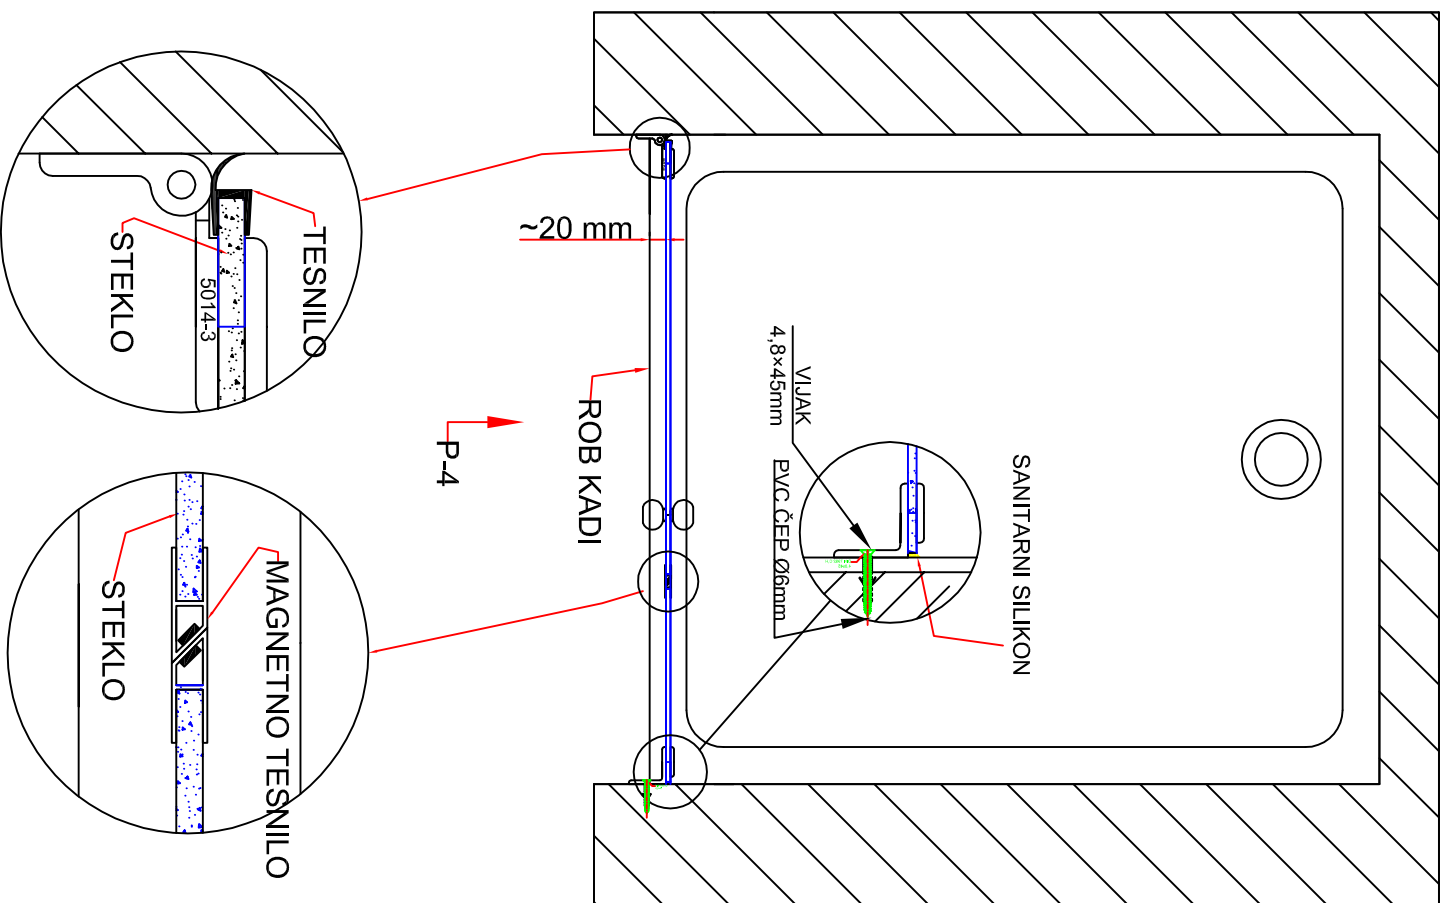


Navodilo za montažo TAI 5


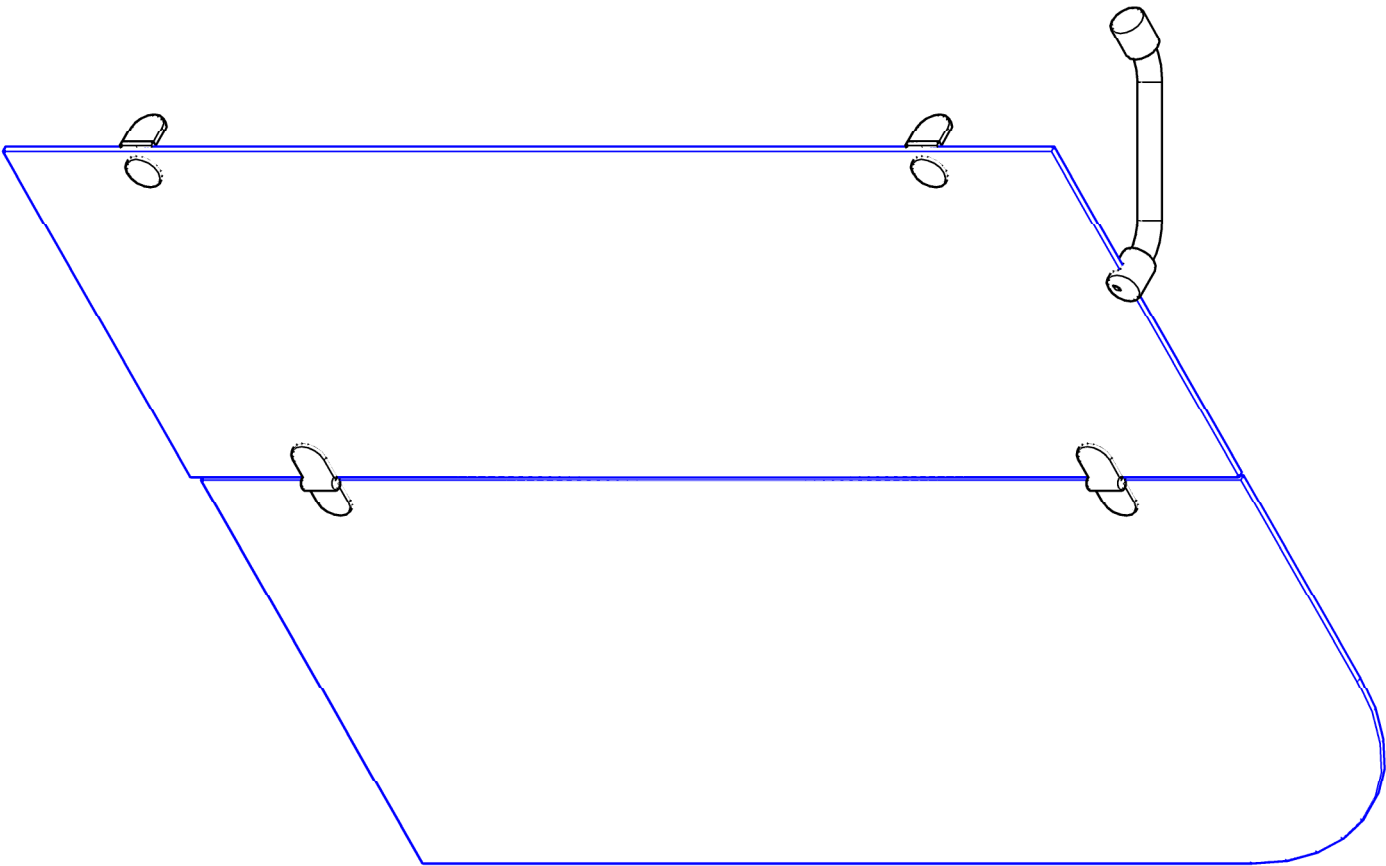



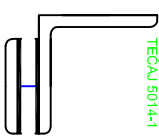


L-700 TAI		
 NAVOLINI ZATIG M6x6mm	2	KOS
 VILJAK 4,8x45	3	KOS
 PVC VILIOZEK 06	3	KOS
 TEČAJ 5014-1	2	KOS
 TEČAJ 5014-4	2	KOS
 MESING DEL 200	1	KOS
 MESING DEL 202	1	KOS






Navodilo za montažo TAI 5

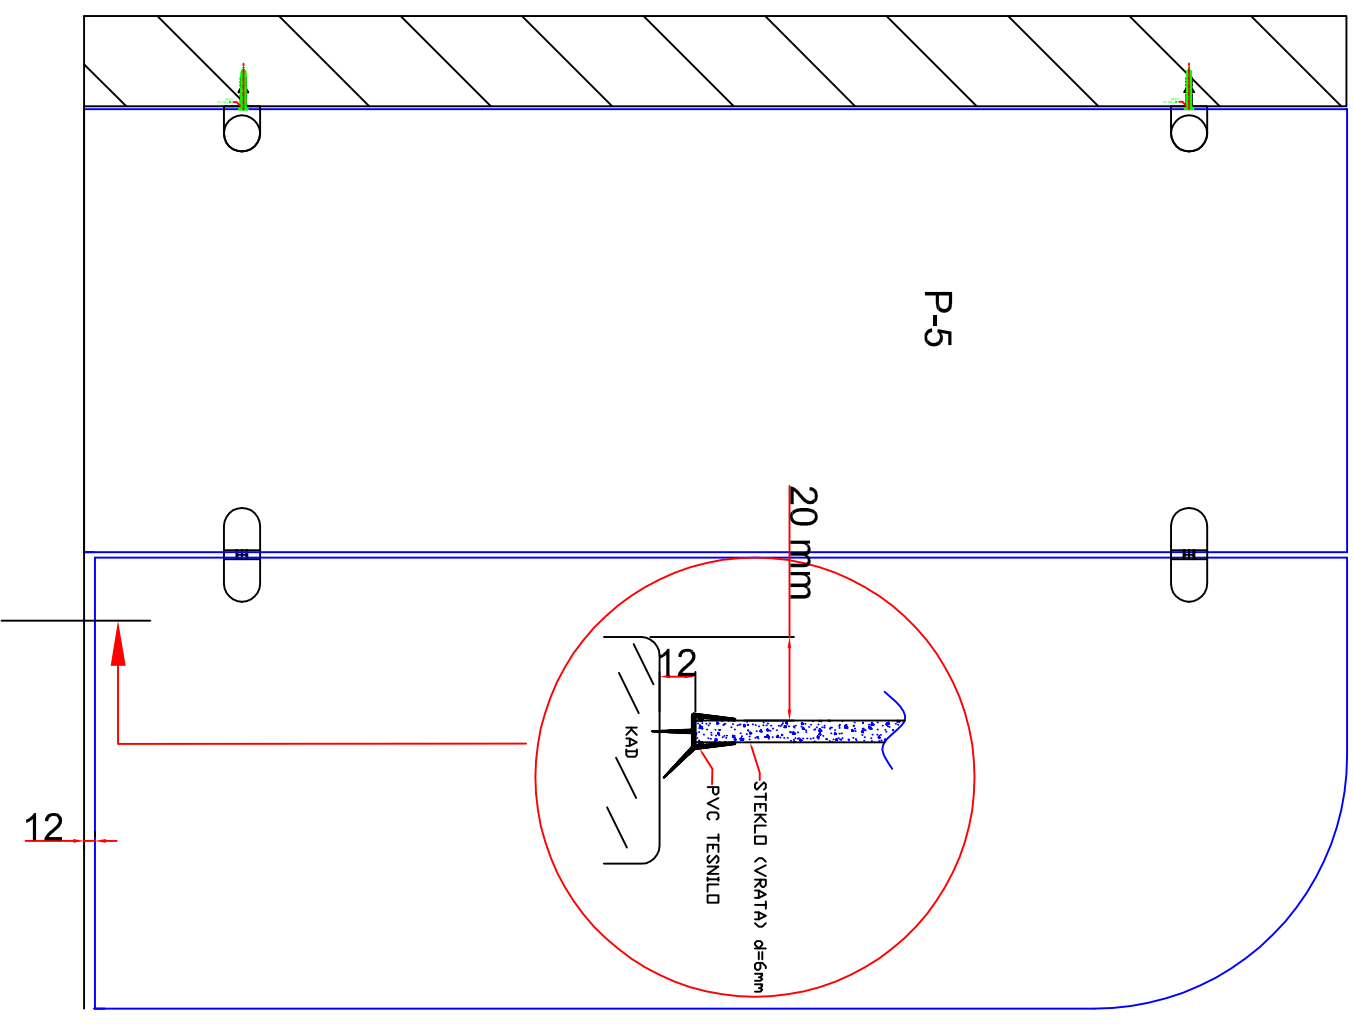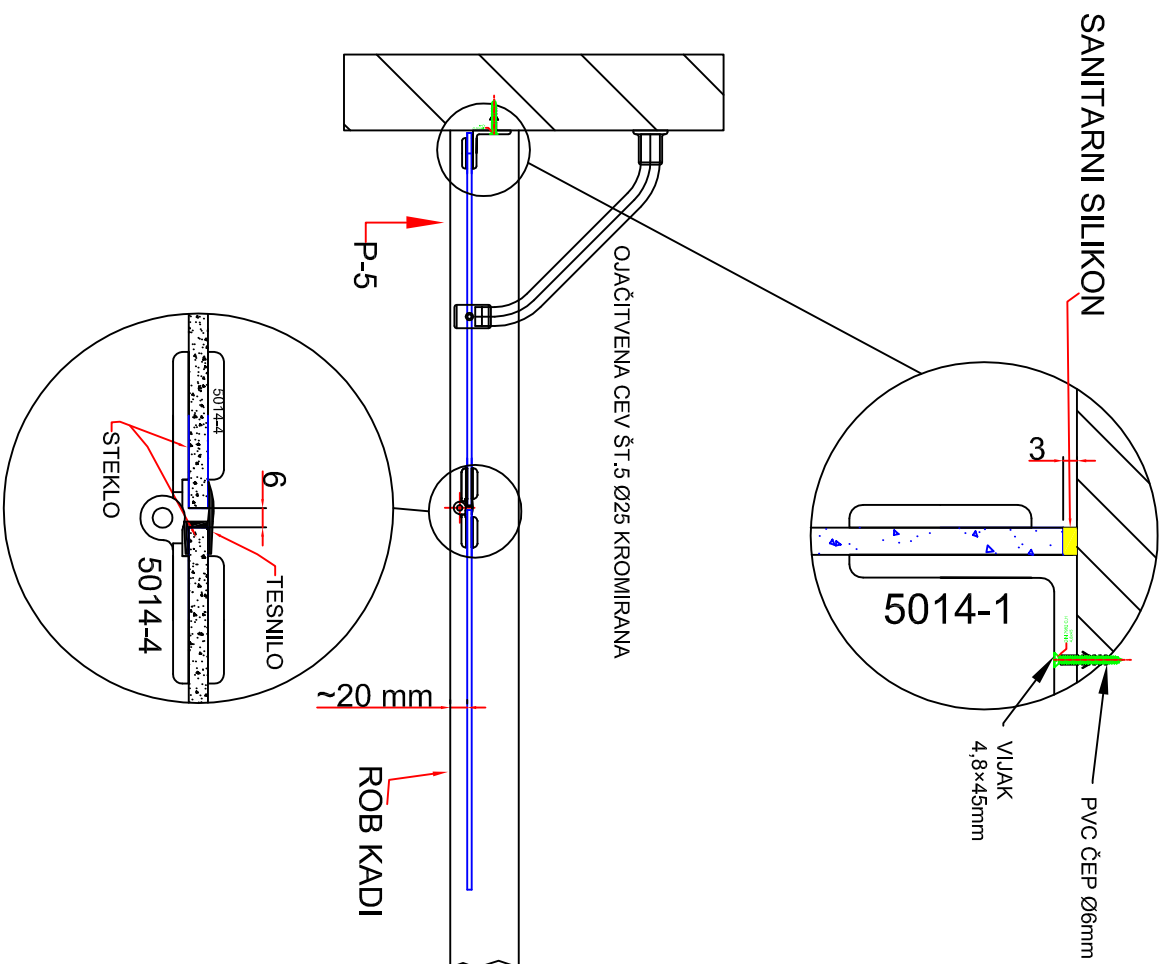

Navodilo za montažo Hera 6

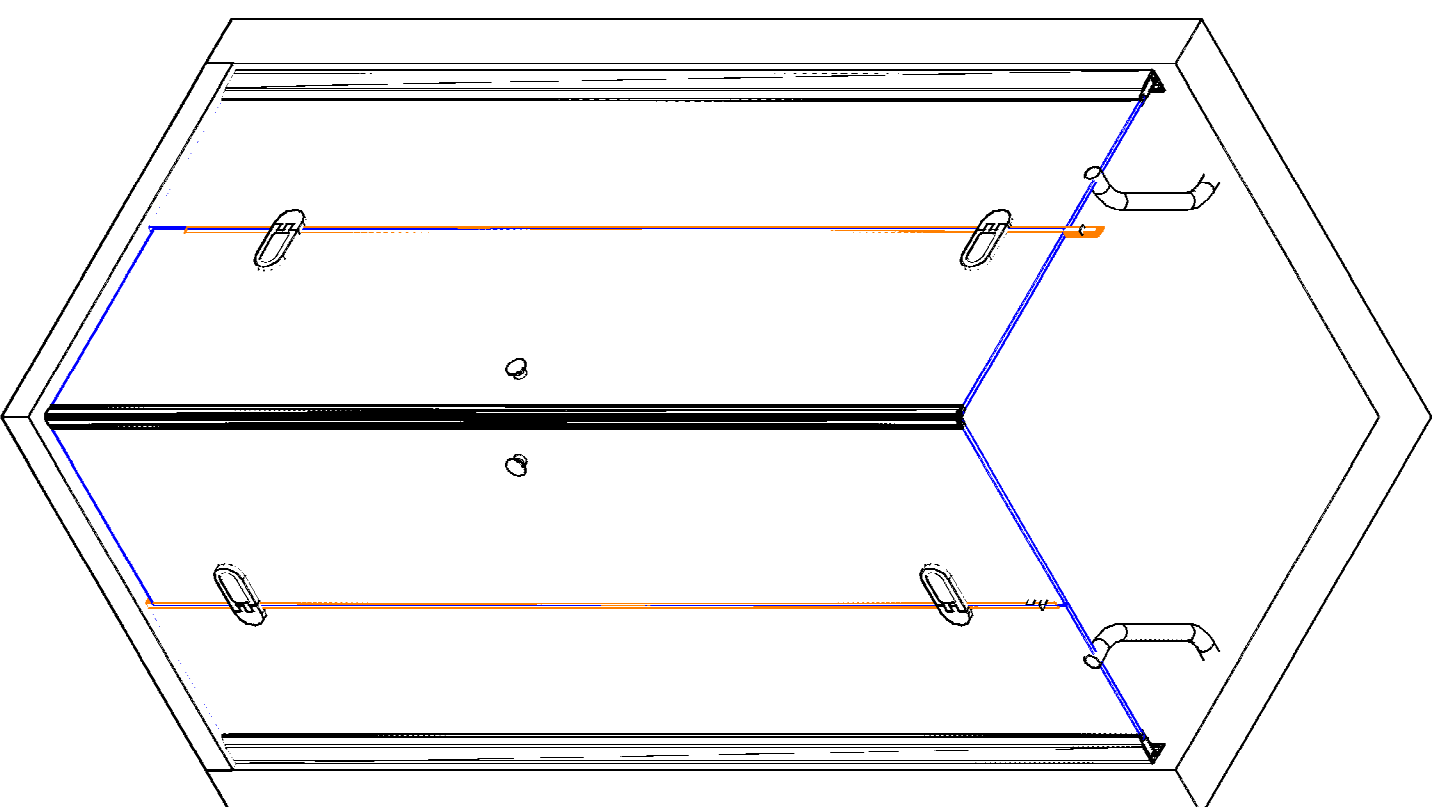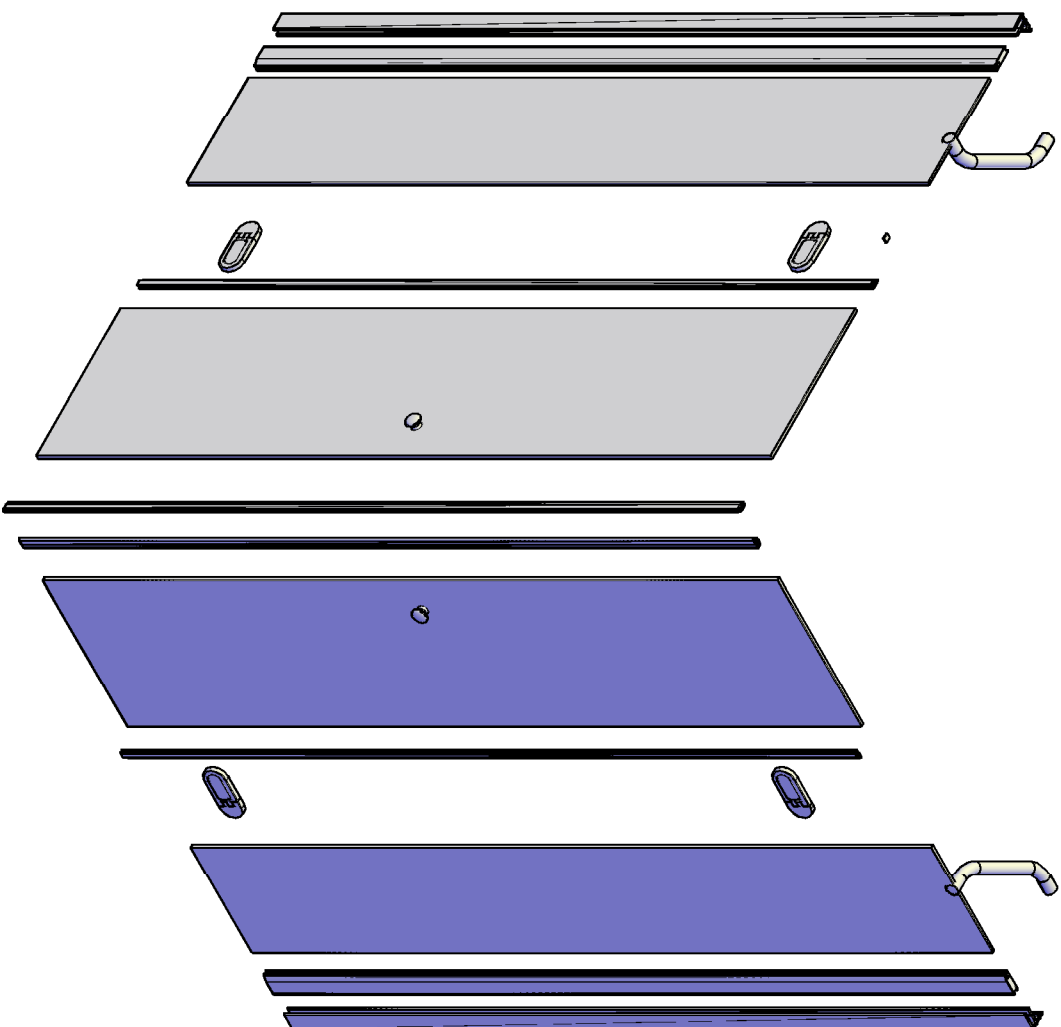

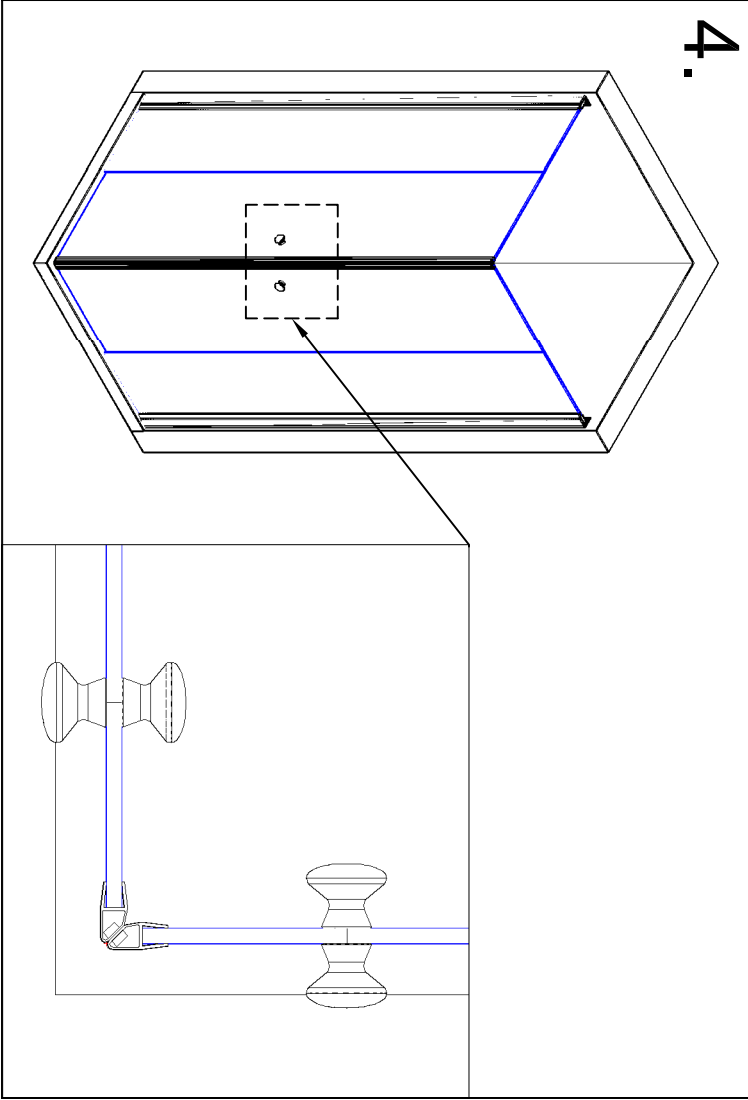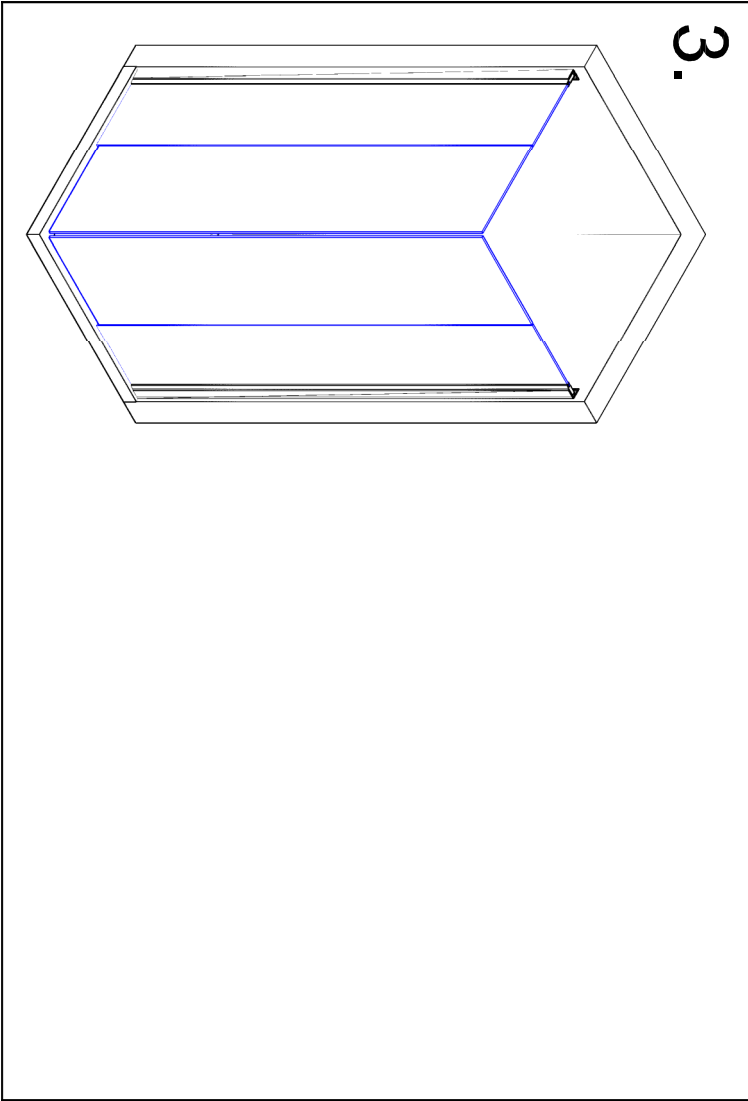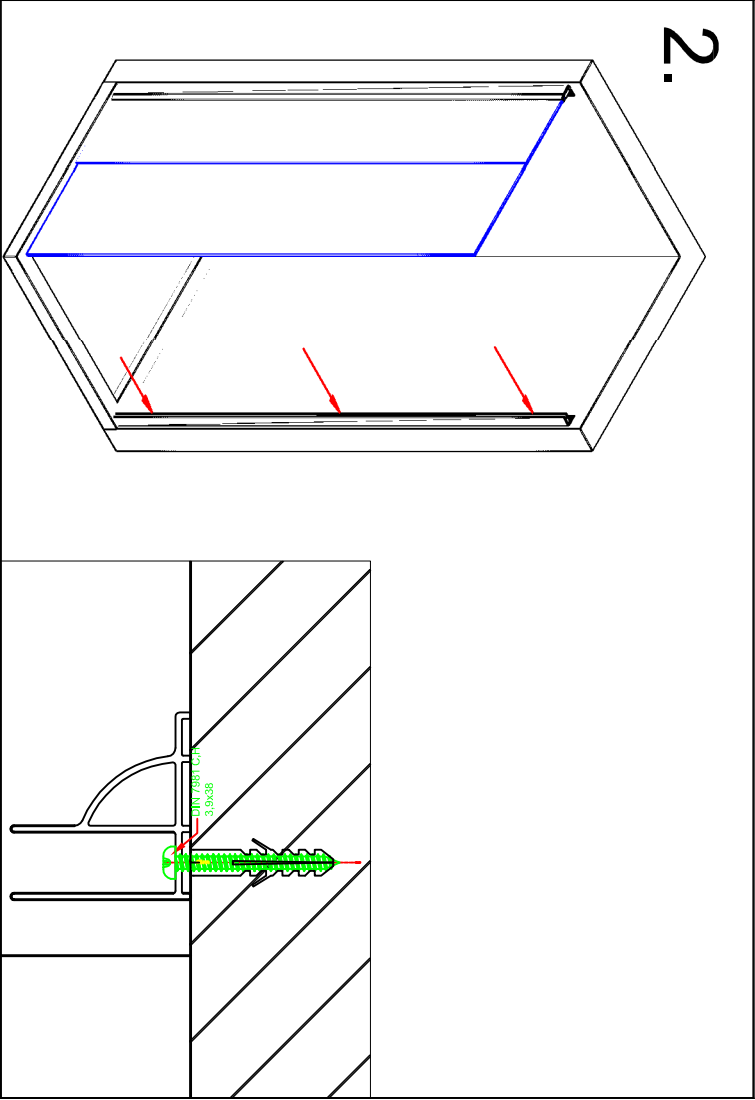
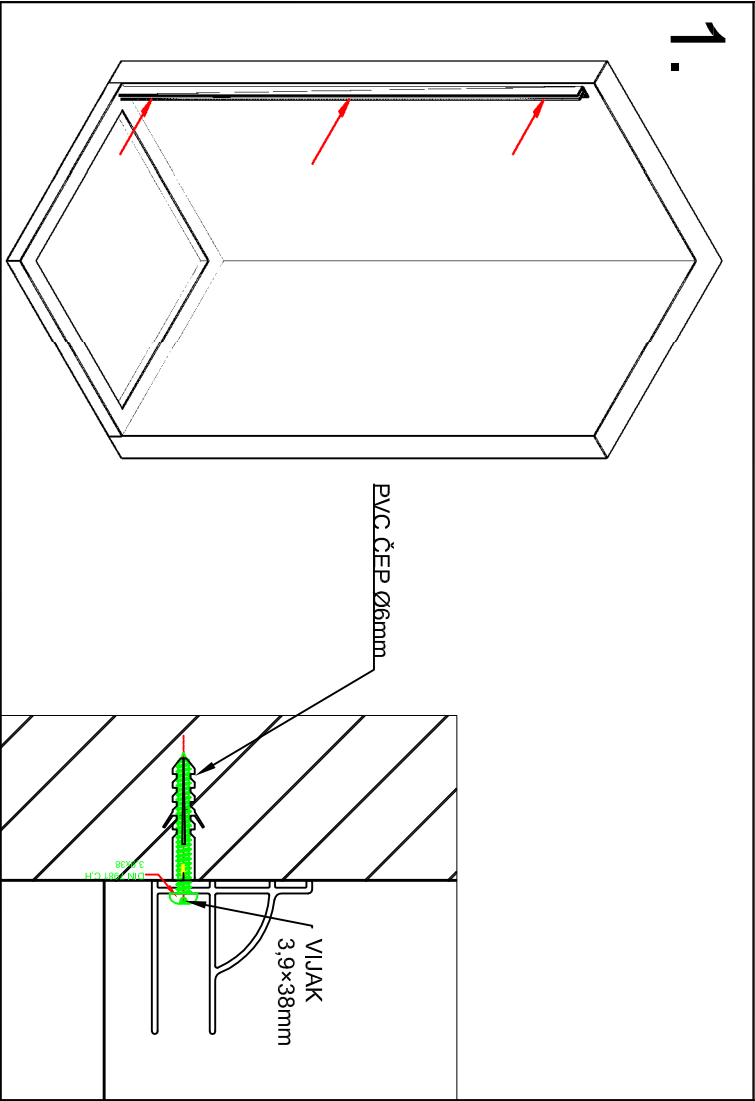


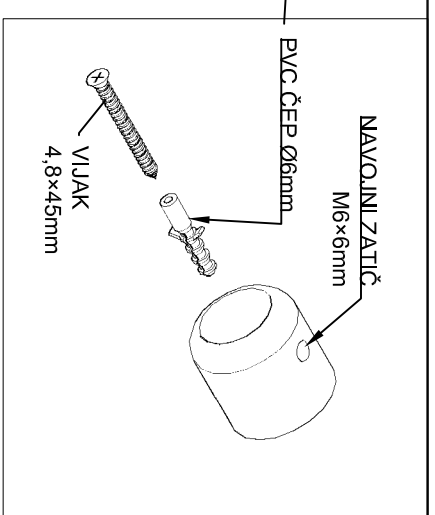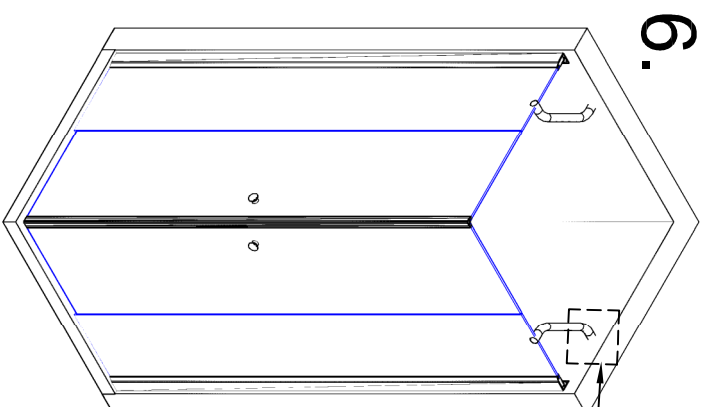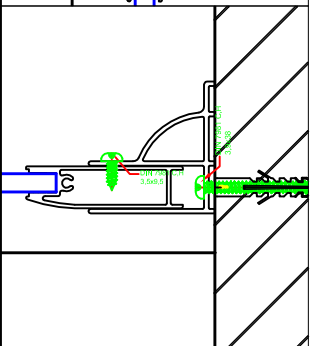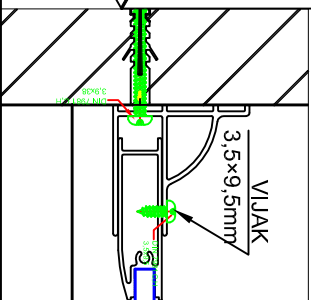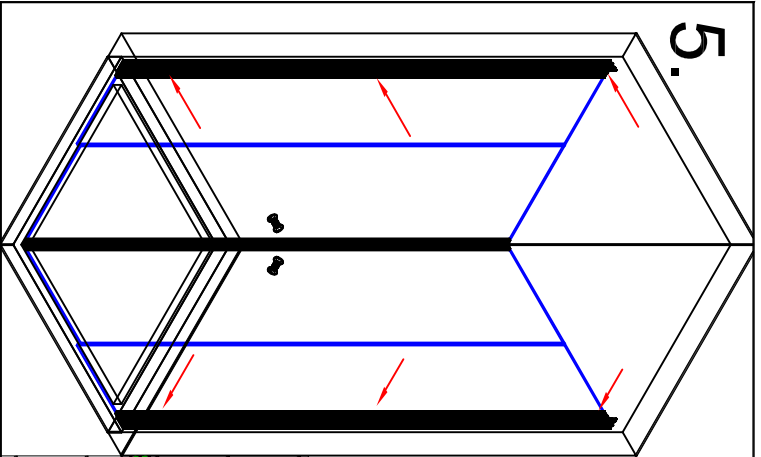


7.

**ZUNANJA
STRAN**



**STEKLO NOTRANJA
STRAN**





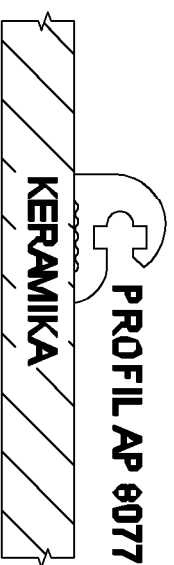
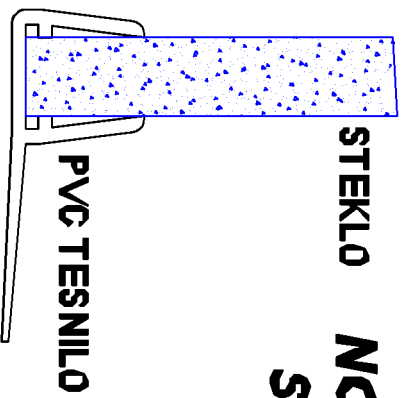


8.

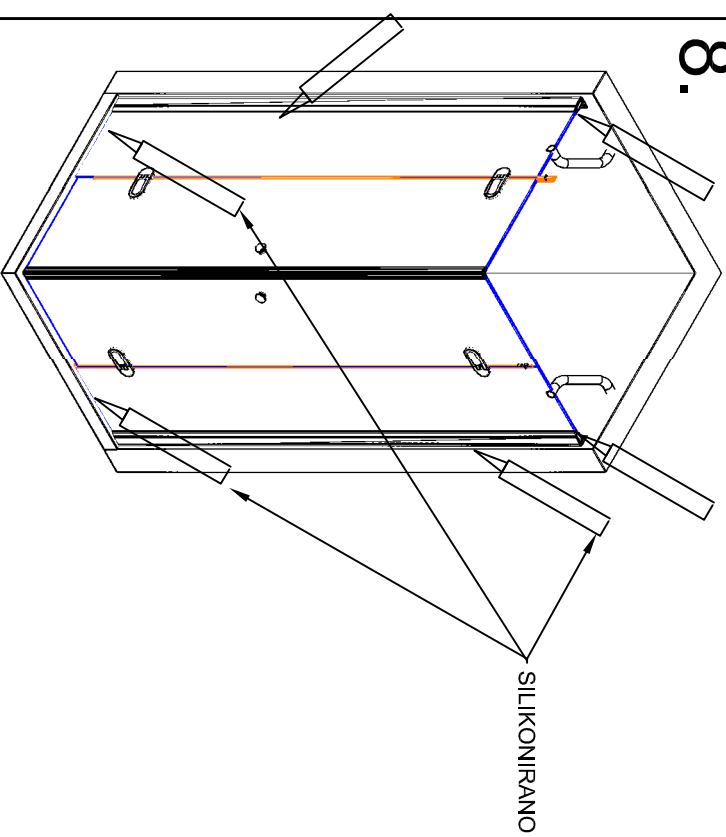




Navodilo za montažo Hera 7

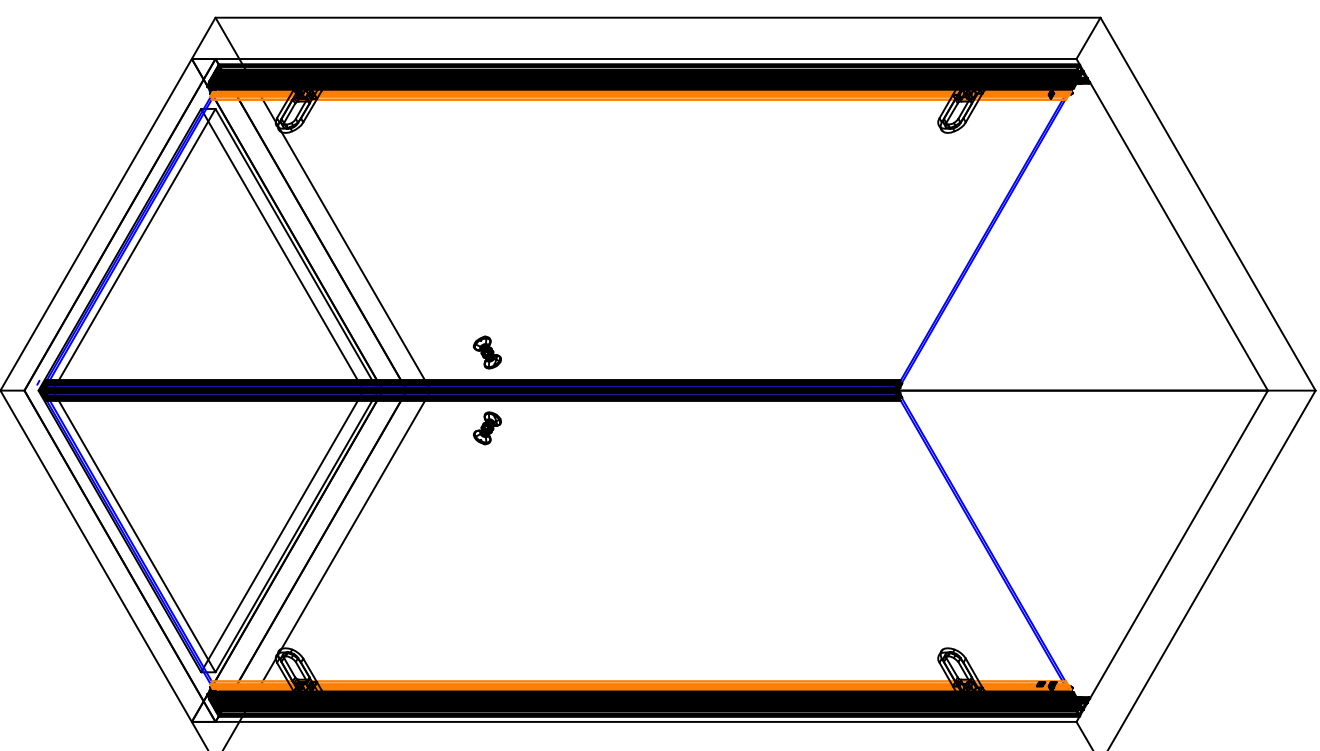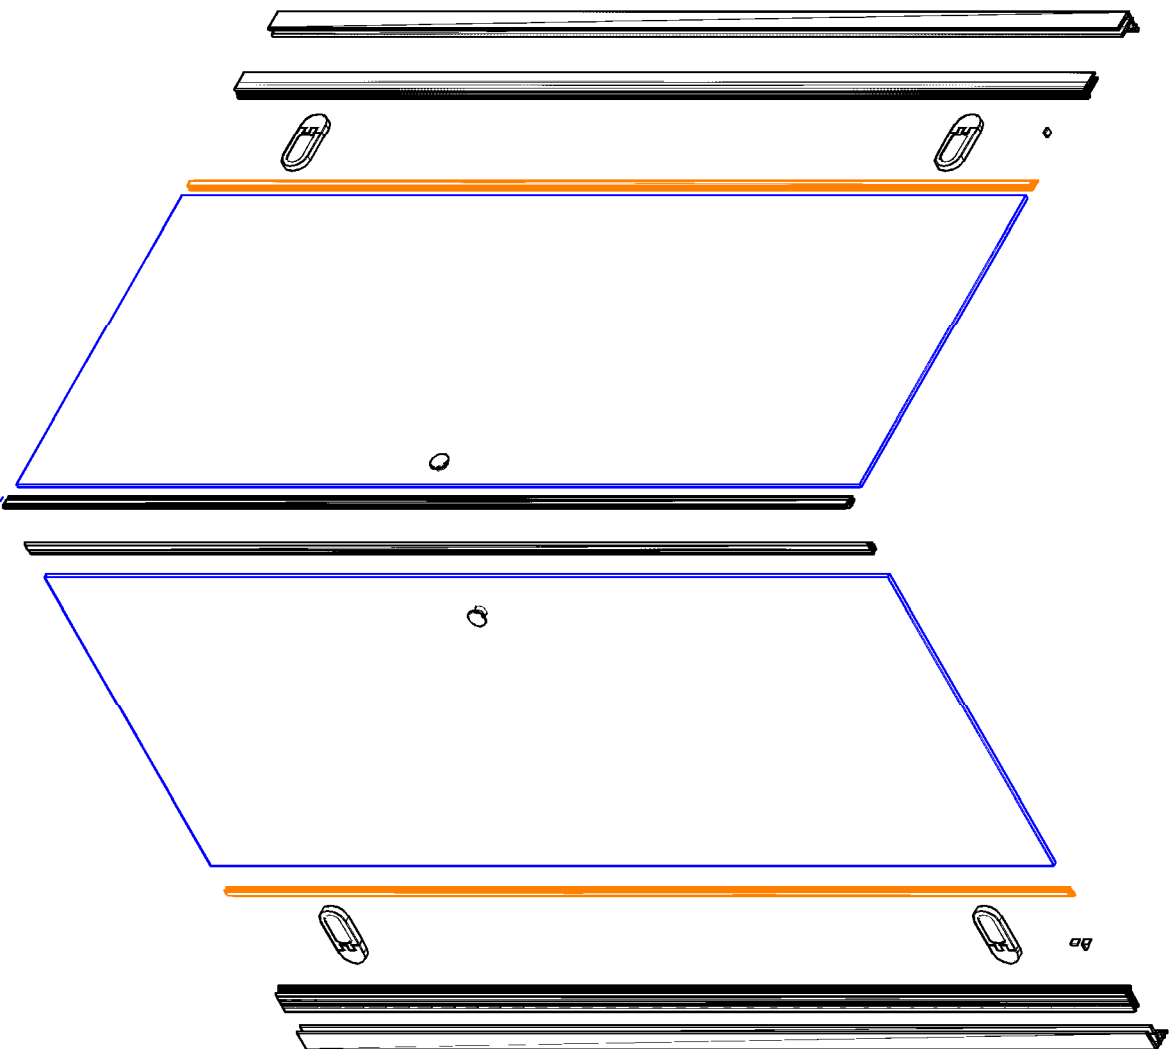

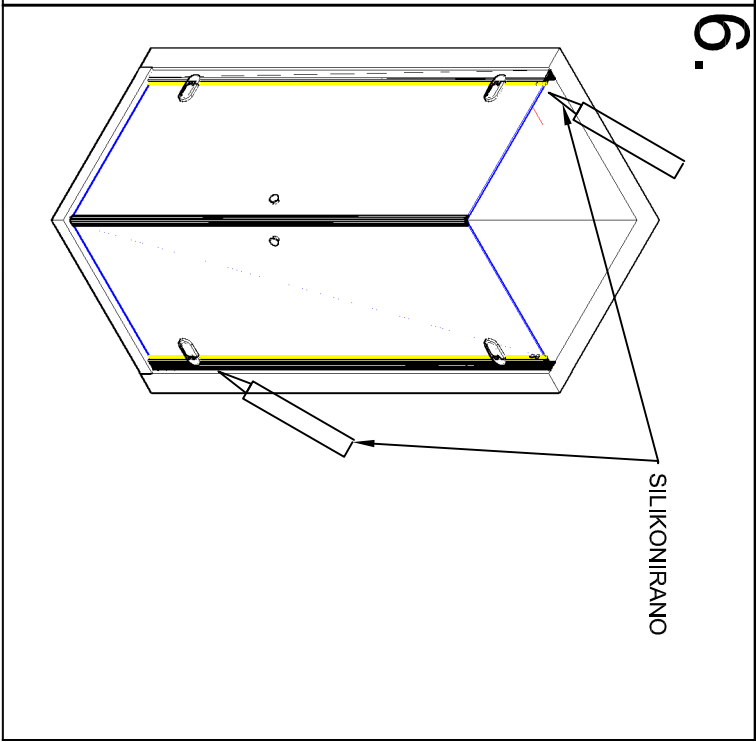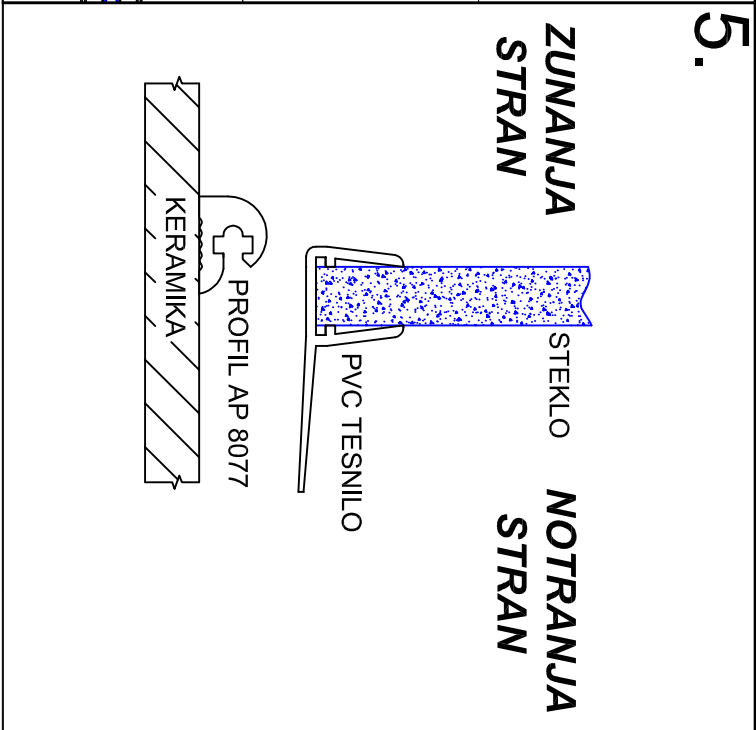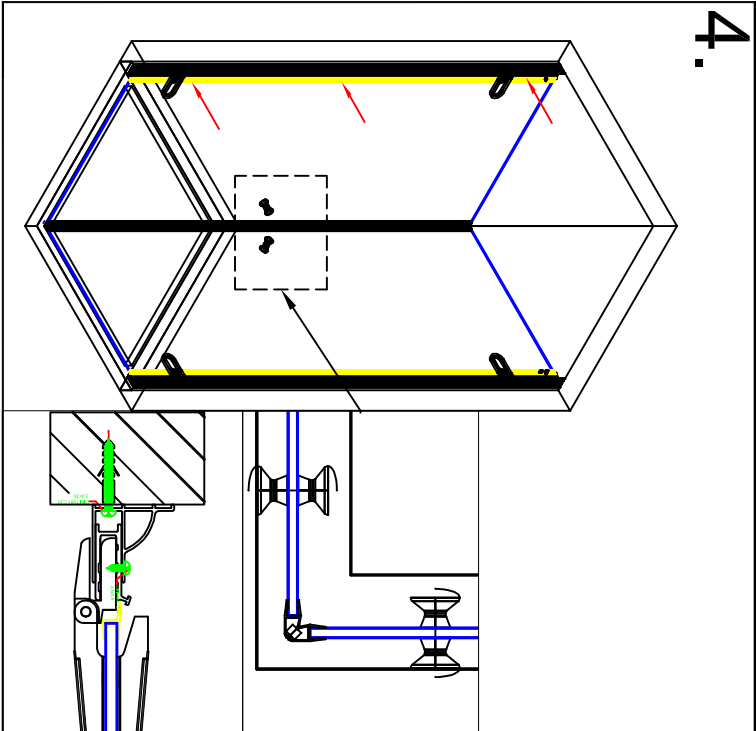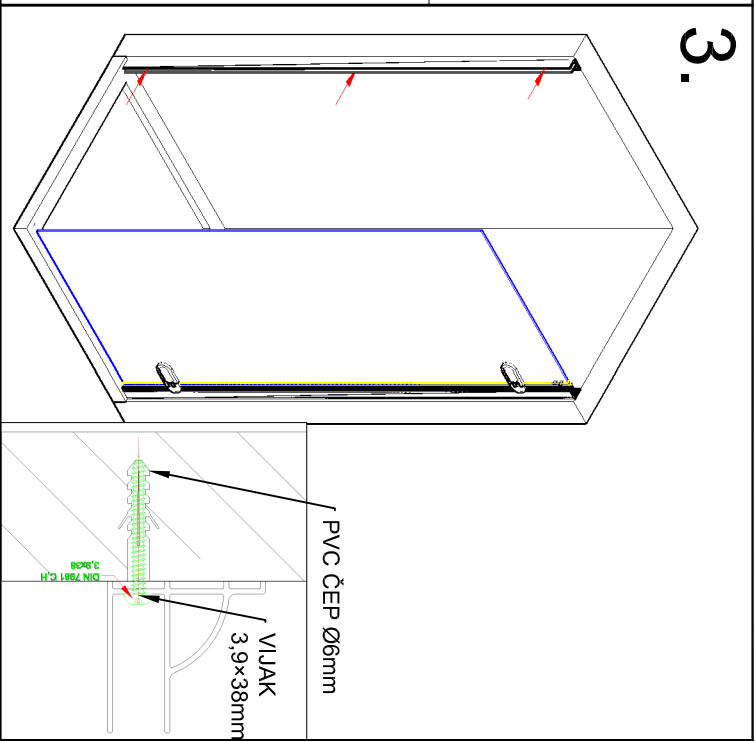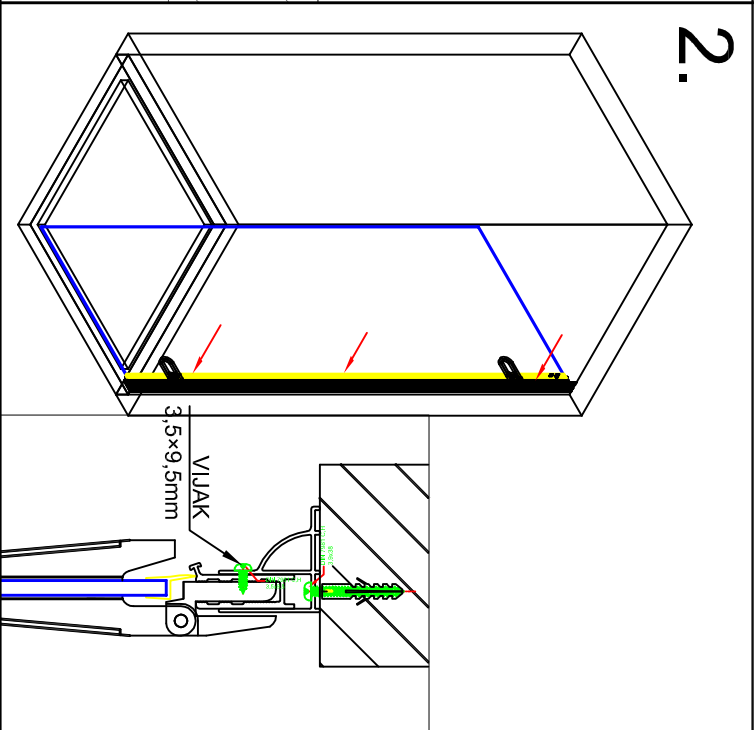
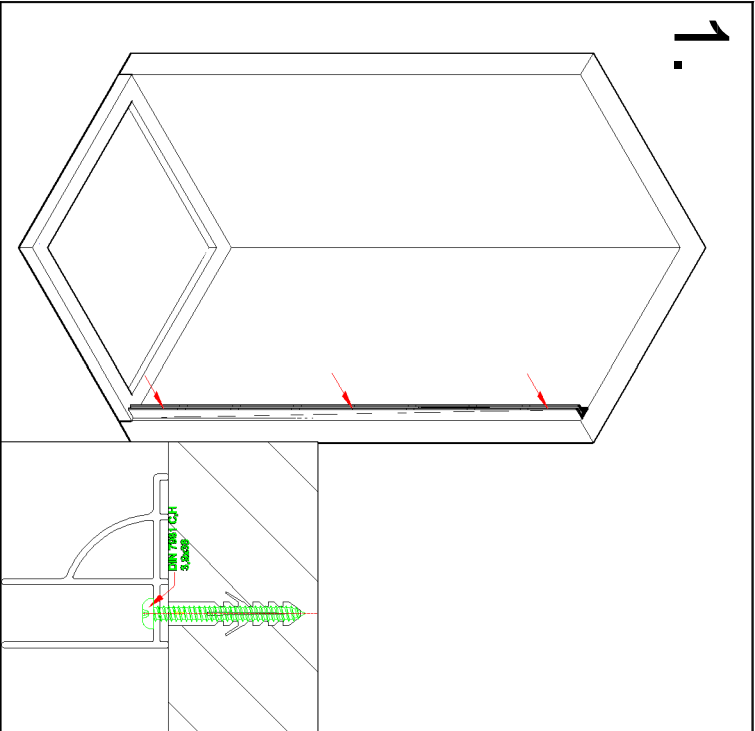


Navodilo za montažo TAI 8

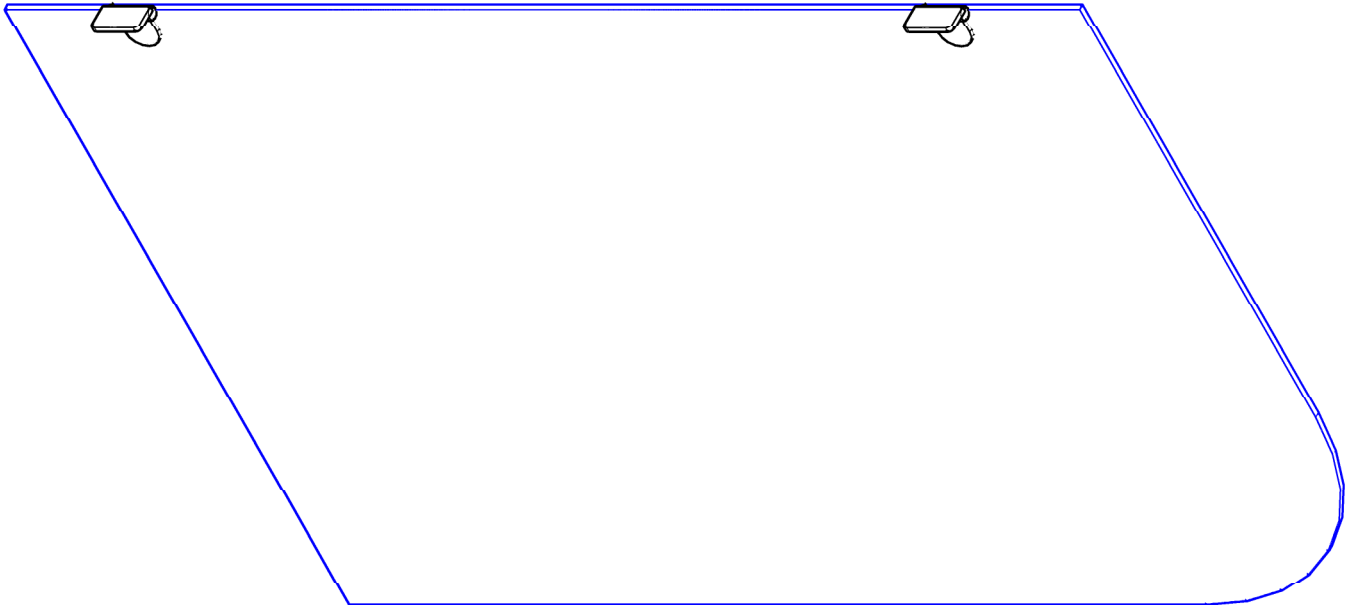




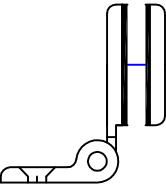
L-700 TAI		
 VILAK 4,8x45	4	KOS
 PVC VLOŽEK Ø6	4	KOS
 TEČAJ 5014-3	2	KOS

Navodilo za montažo TAI 8

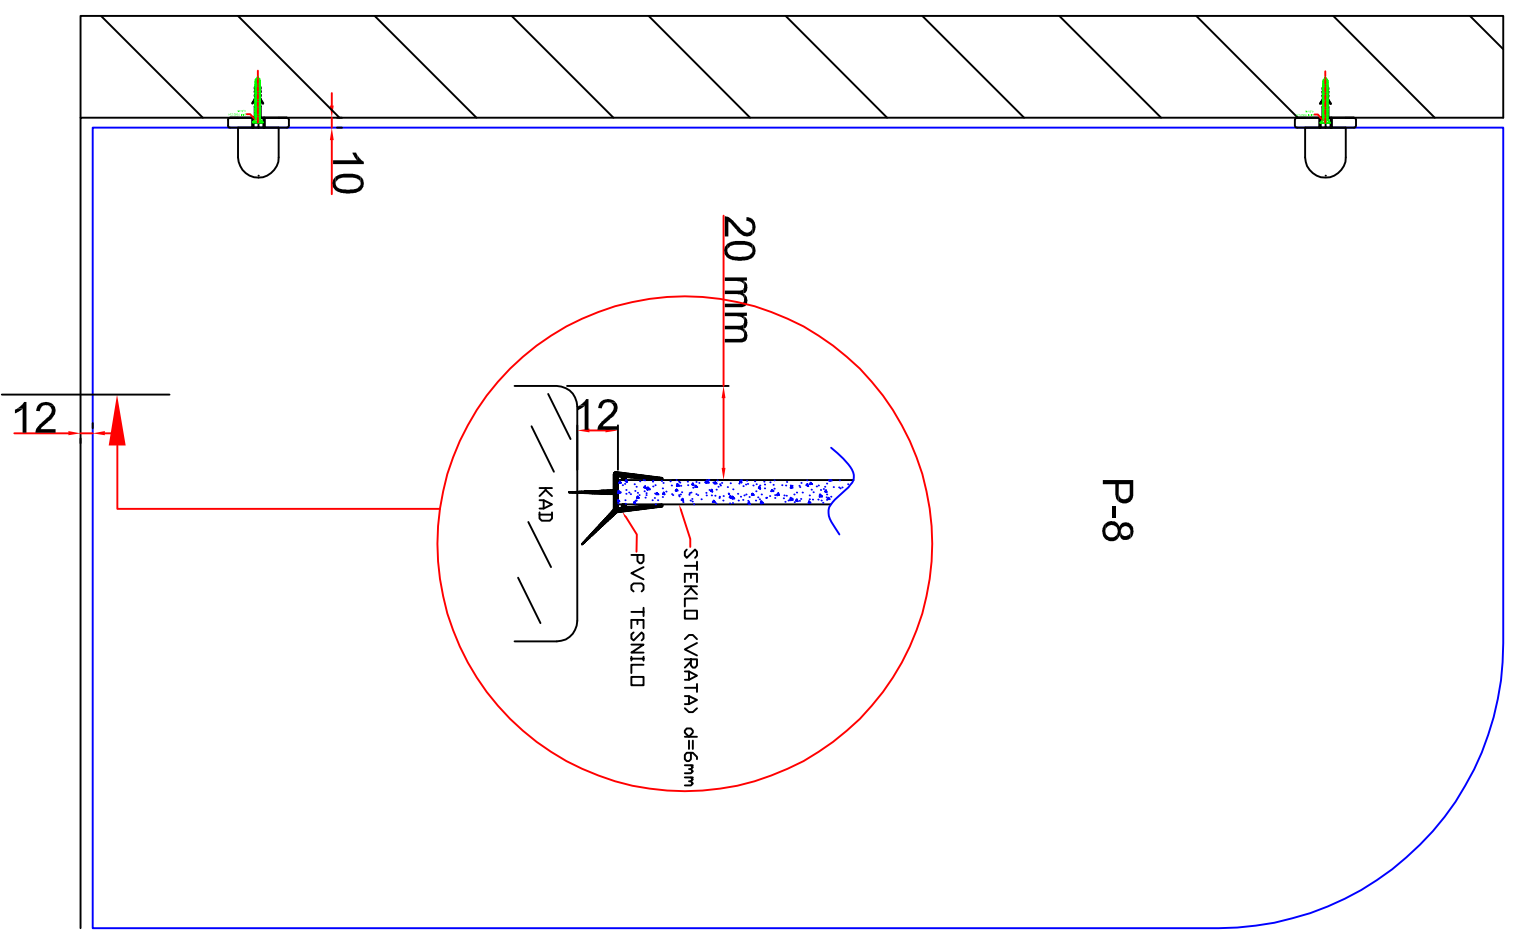
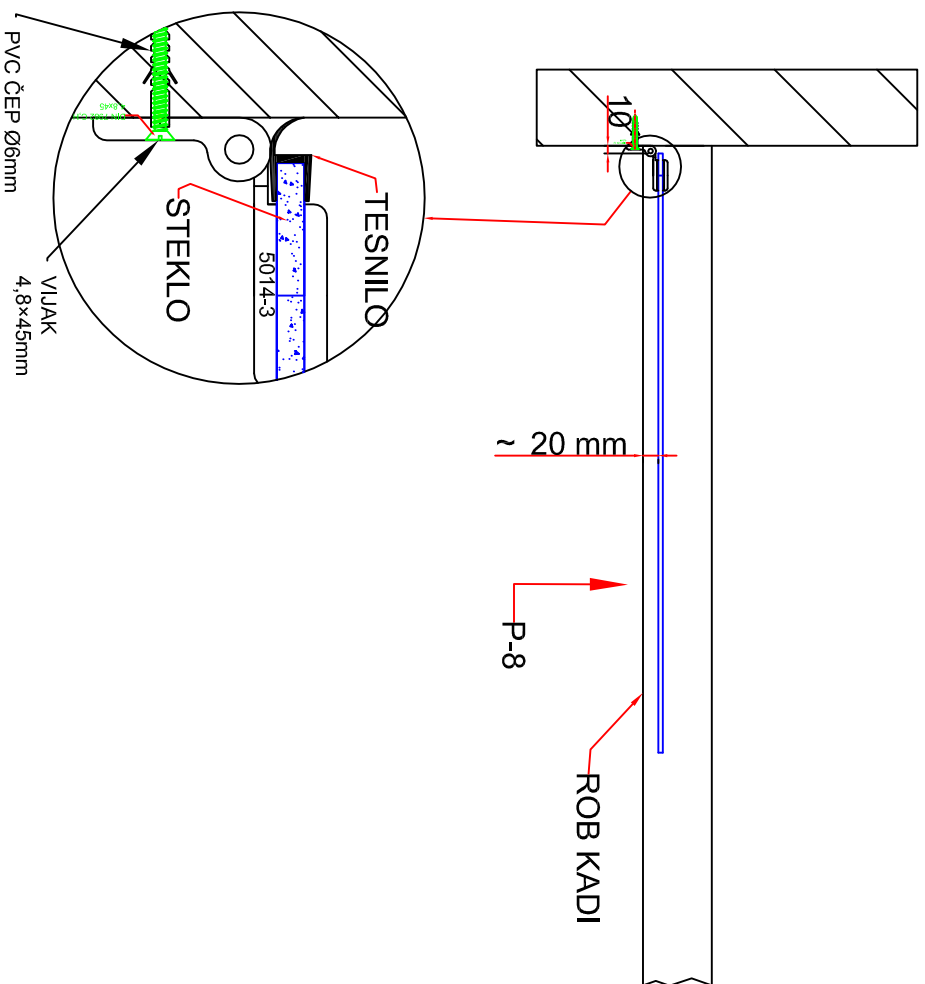


Navodilo za montažo TAI 9

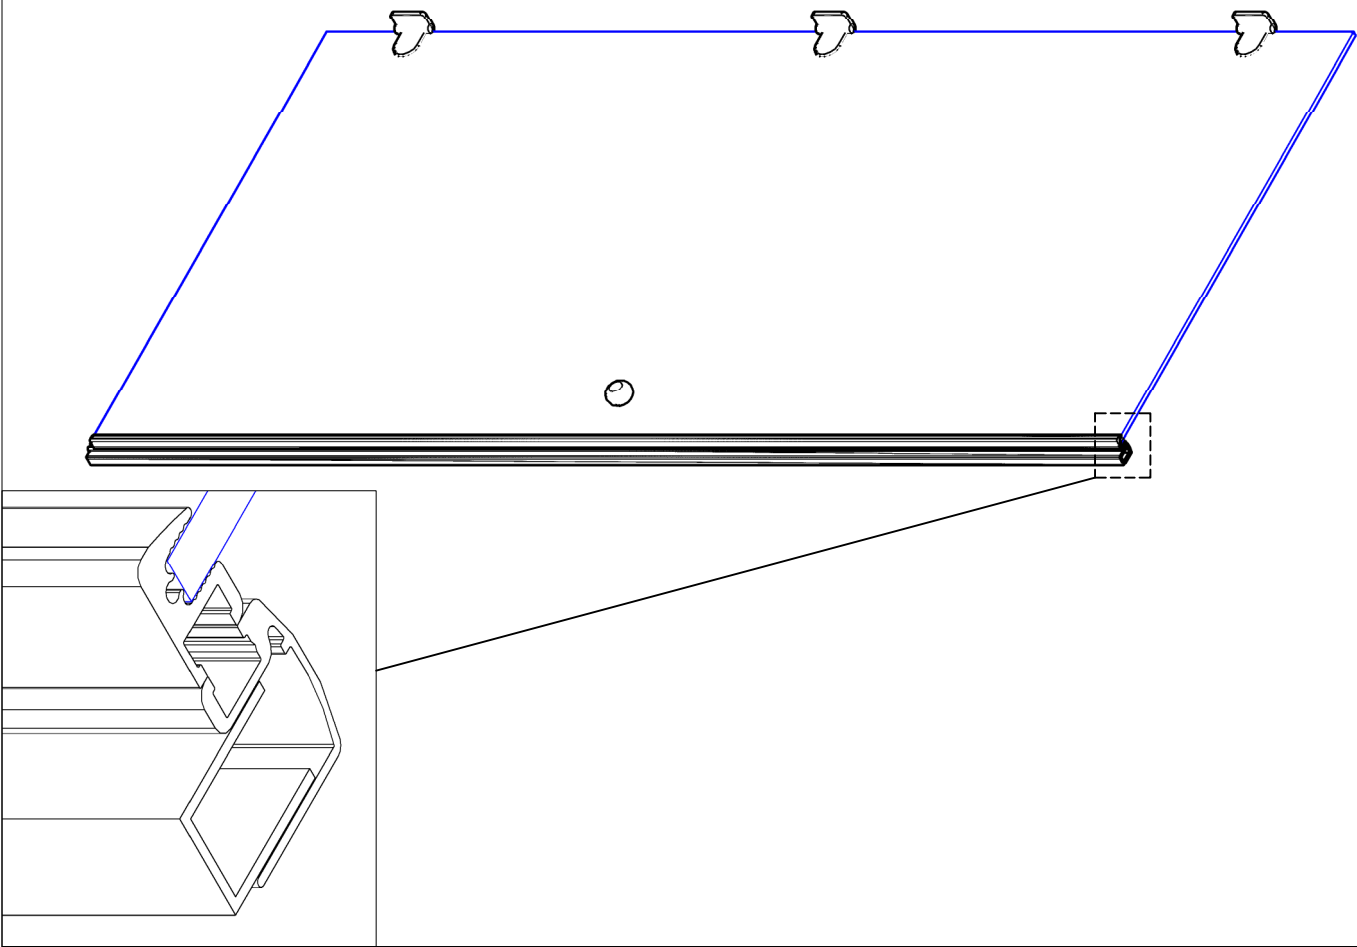




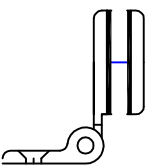

L-700 TAI		
 VLIAK 3,5x9,5mm	4	KOS
 VLIAK 4,8x45	6	KOS
 PVC VLOŽEK Ø6	10	KOS
 VLIAK 3,9x38	4	KOS
 TEČAJ 5014-3	3	KOS
 ROČAJ	2	KOS

Navodilo za montažo TAI 9

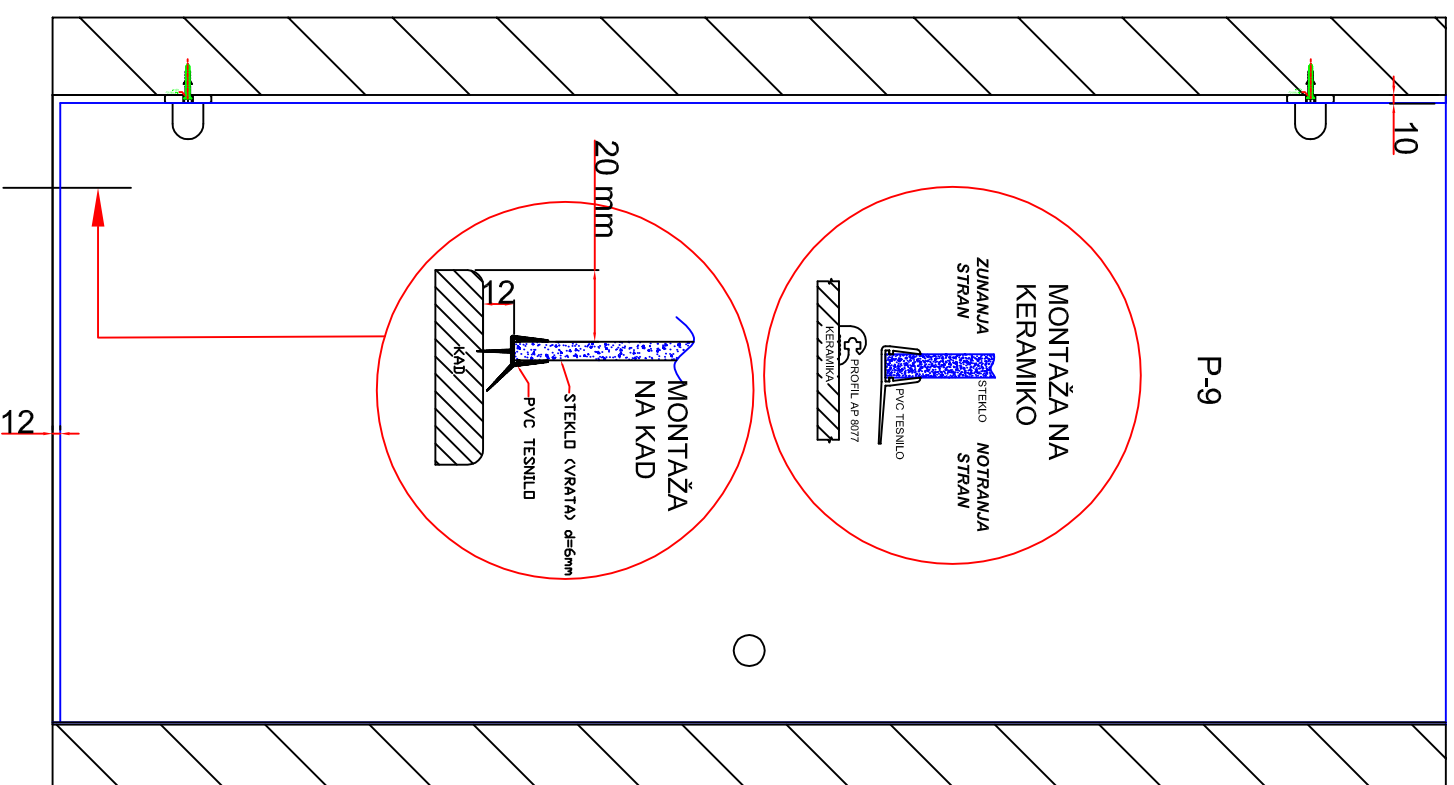
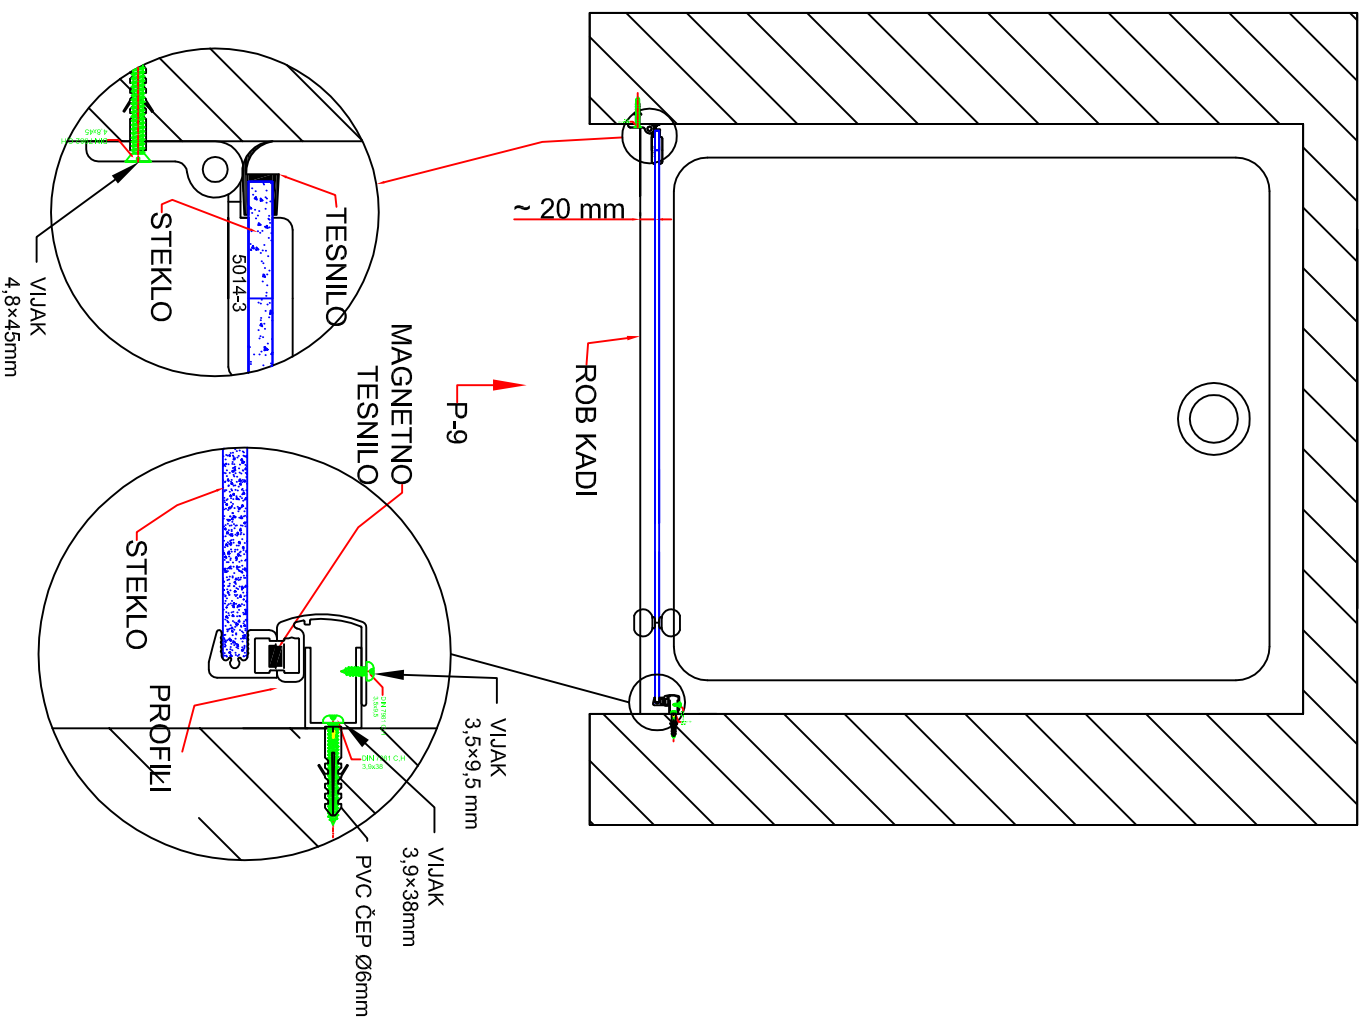


Navodilo za montažo TAI 11

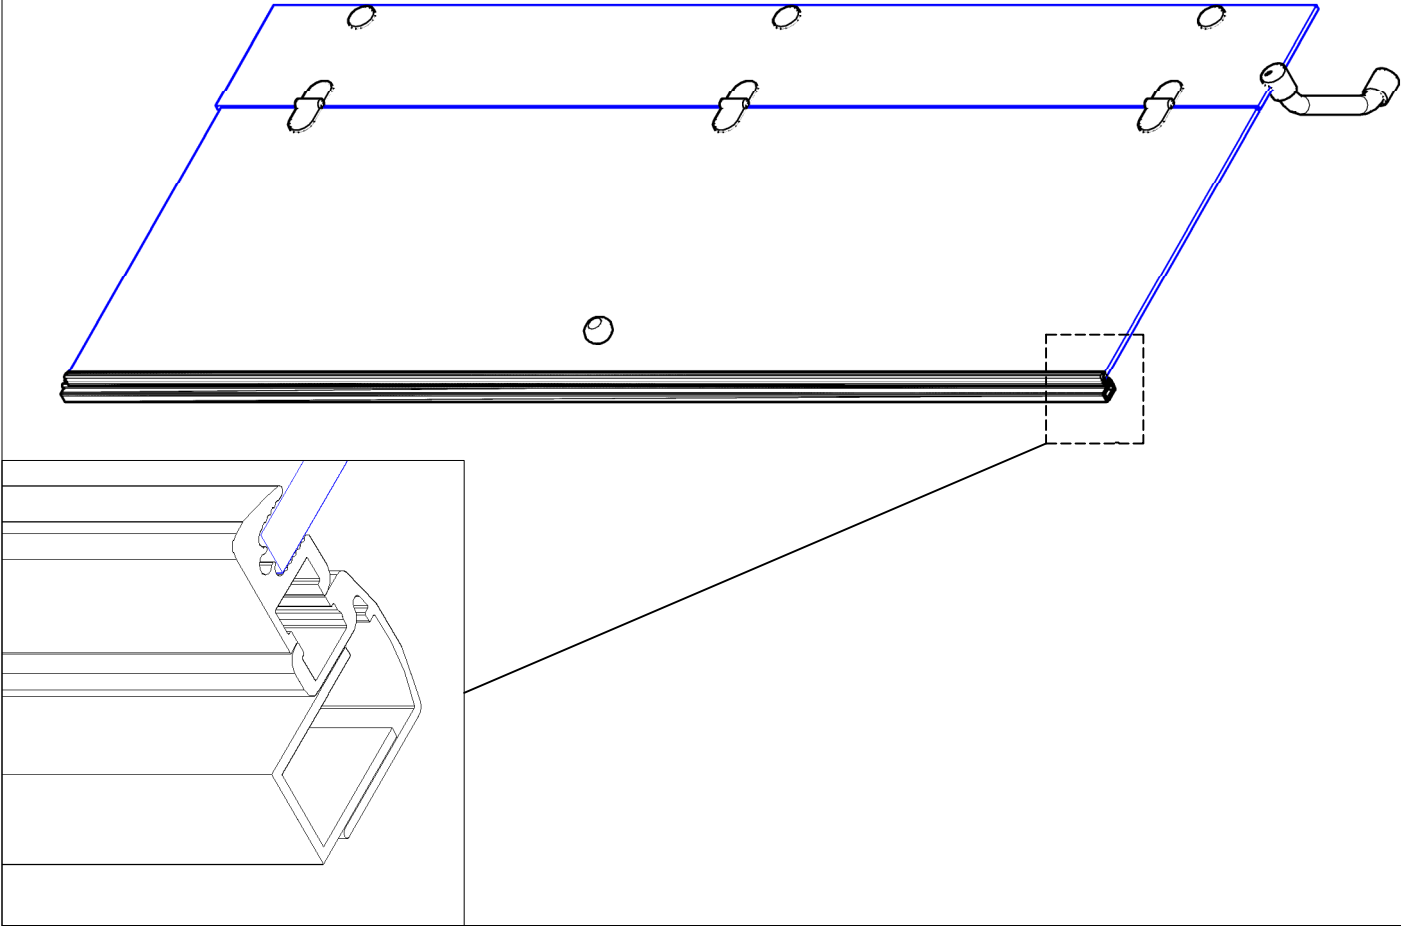


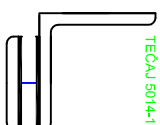

L-700 TAI		
	4	KOS
	2	KOS
	4	KOS
	8	KOS
	4	KOS
	3	KOS
	3	KOS
	1	KOS
	1	KOS
	2	KOS

Navodilo za montažo TAI 11

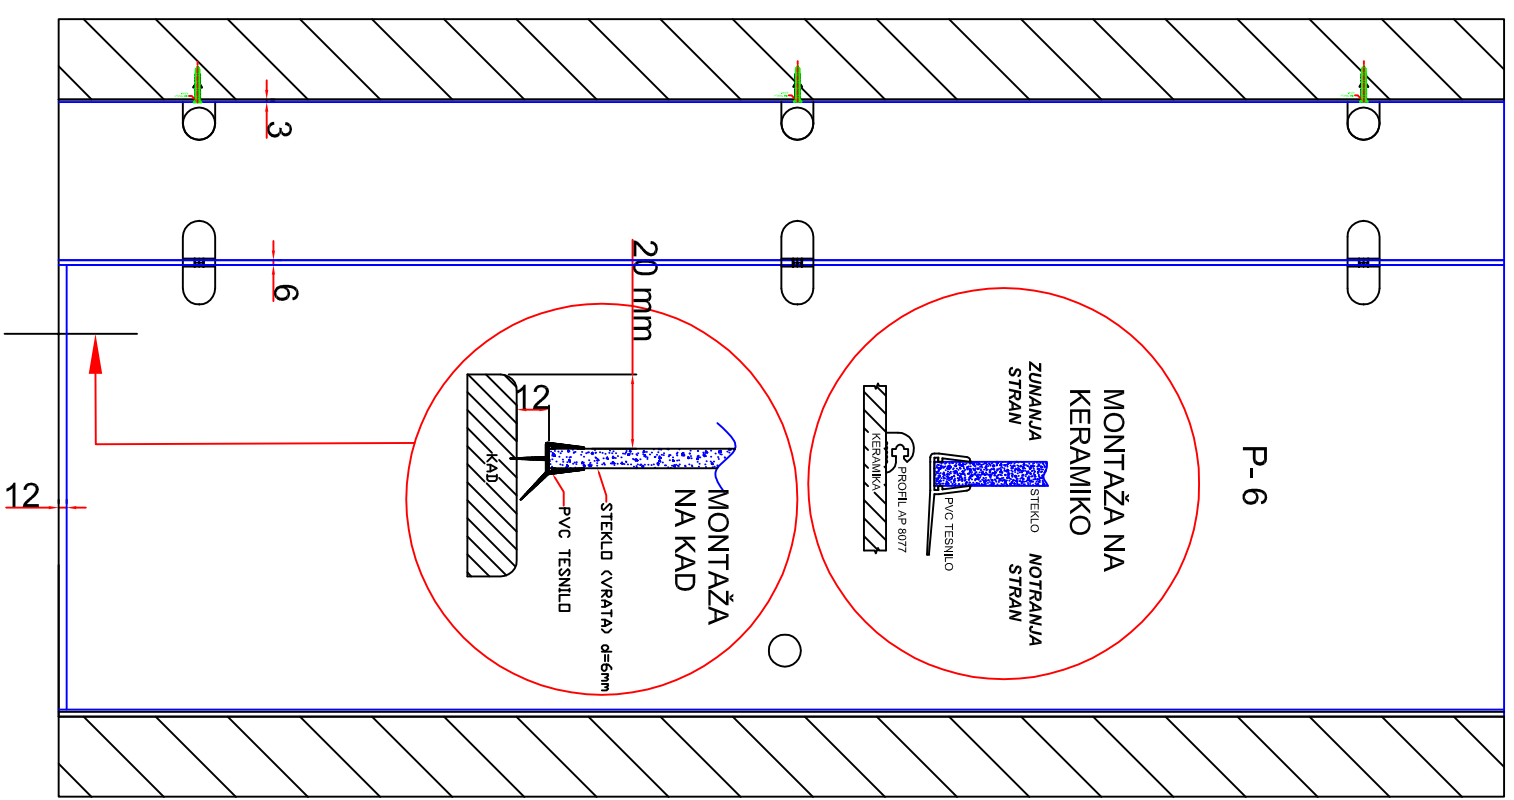
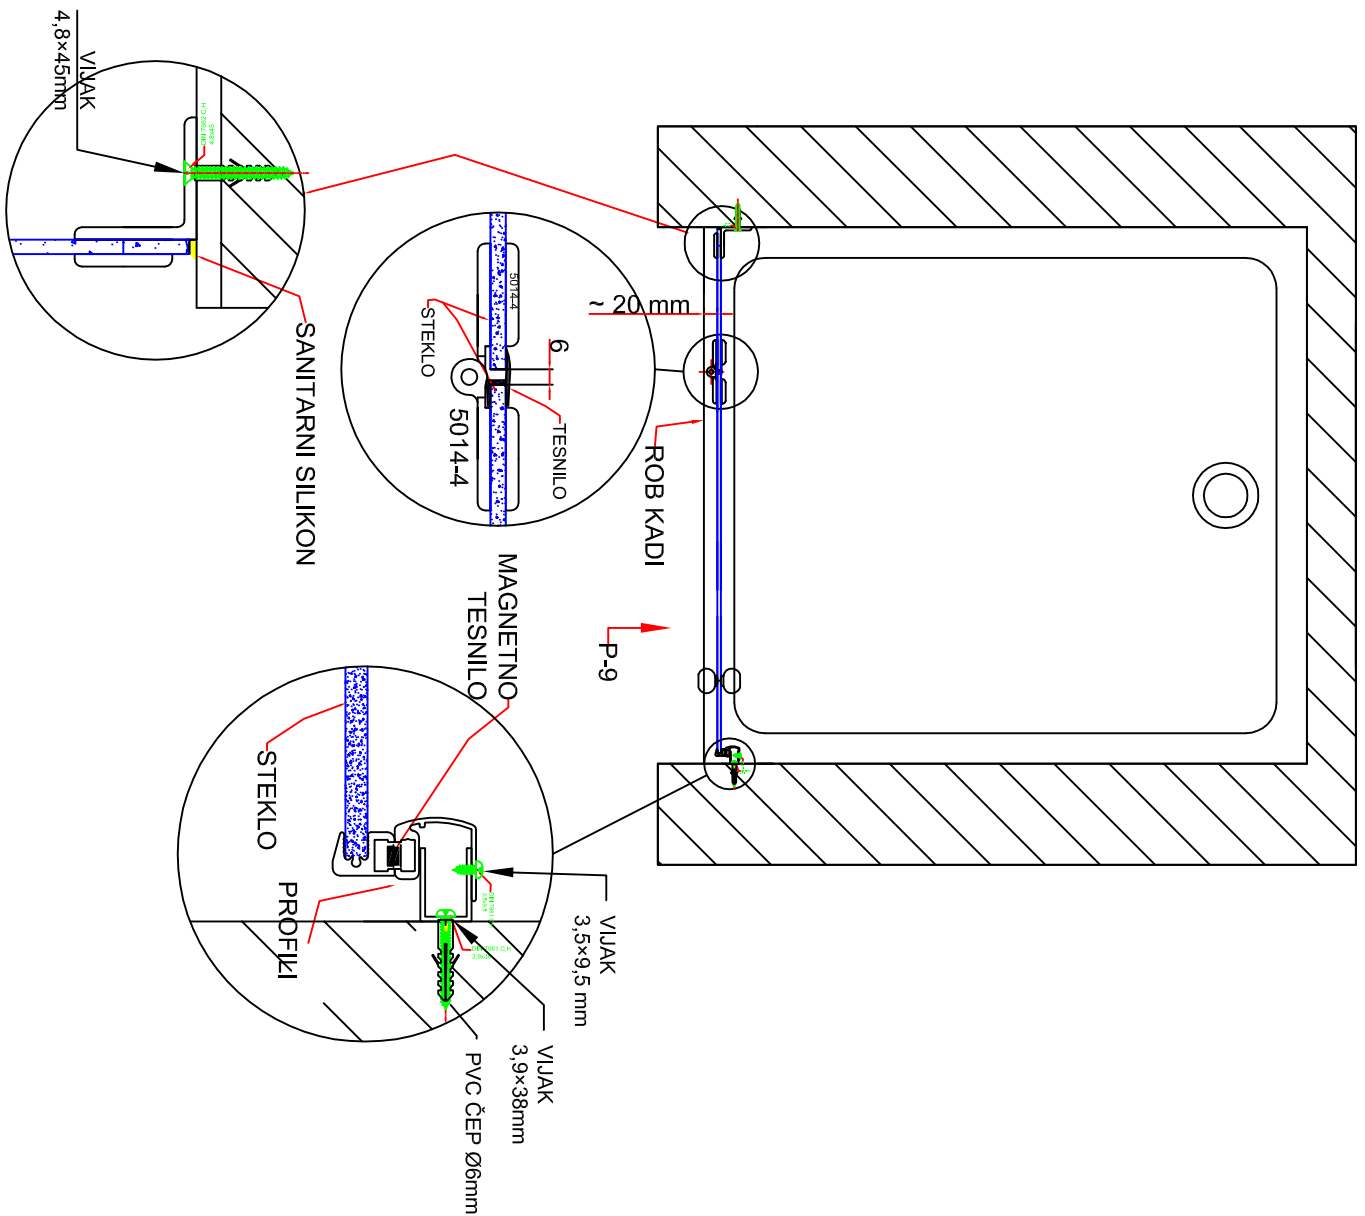


Navodilo za montažo TAI 1

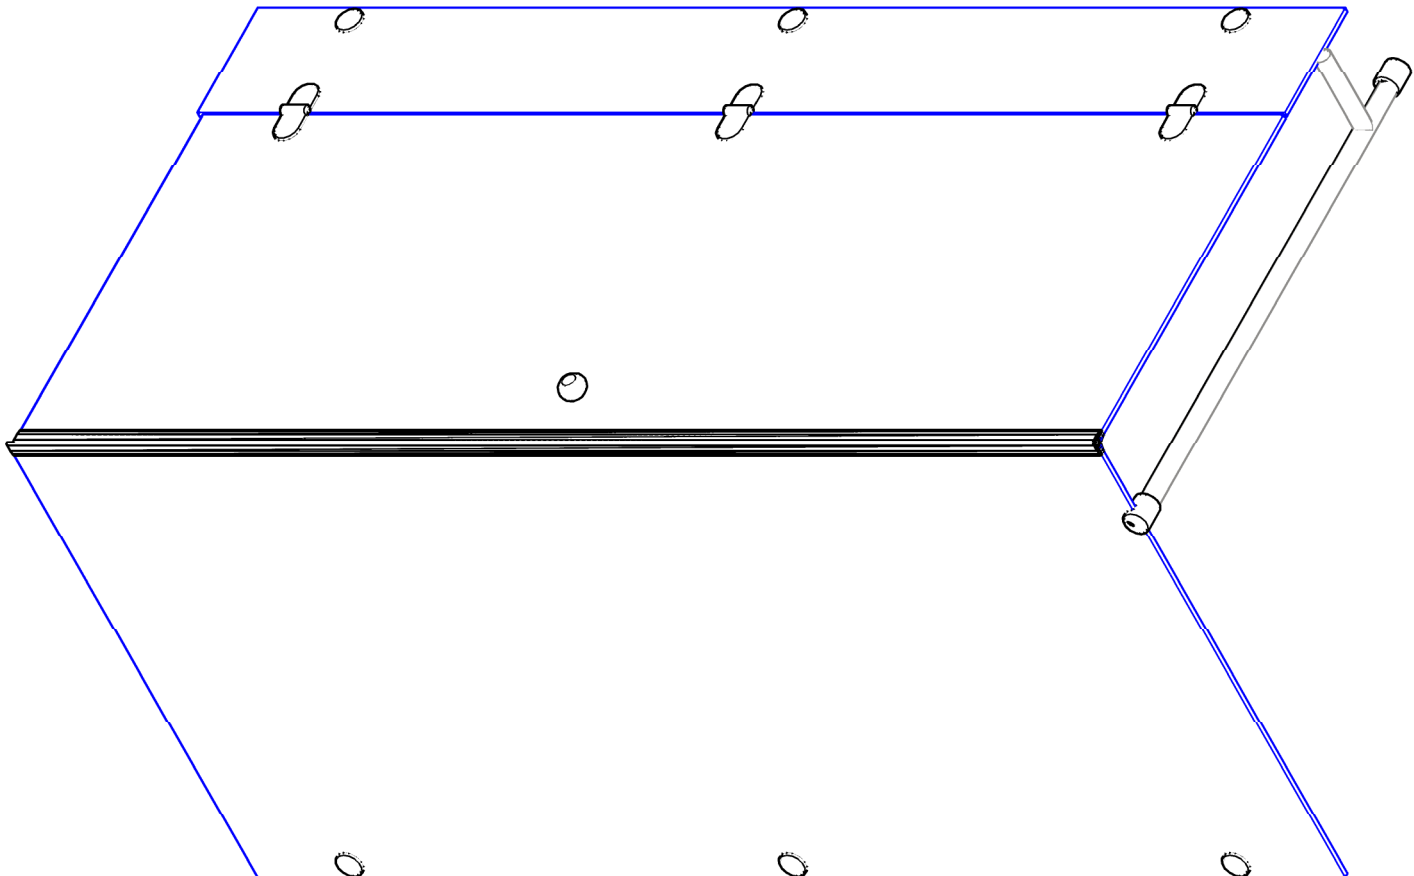



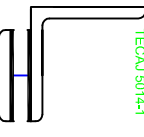
L-700 TAI		
 NAVOJINI ZATIG Mes6mm	3	KOS
 VITAK 4,8x45	7	KOS
 PVC VLOZEK Ø6	7	KOS
 TEČAJ 5014-1	6	KOS
 TEČAJ 5014-4	3	KOS
 MESING DEL.200	1	KOS
 MESING DEL.202	2	KOS
 ROČAJ	2	KOS

Navodilo za montažo TAI 1

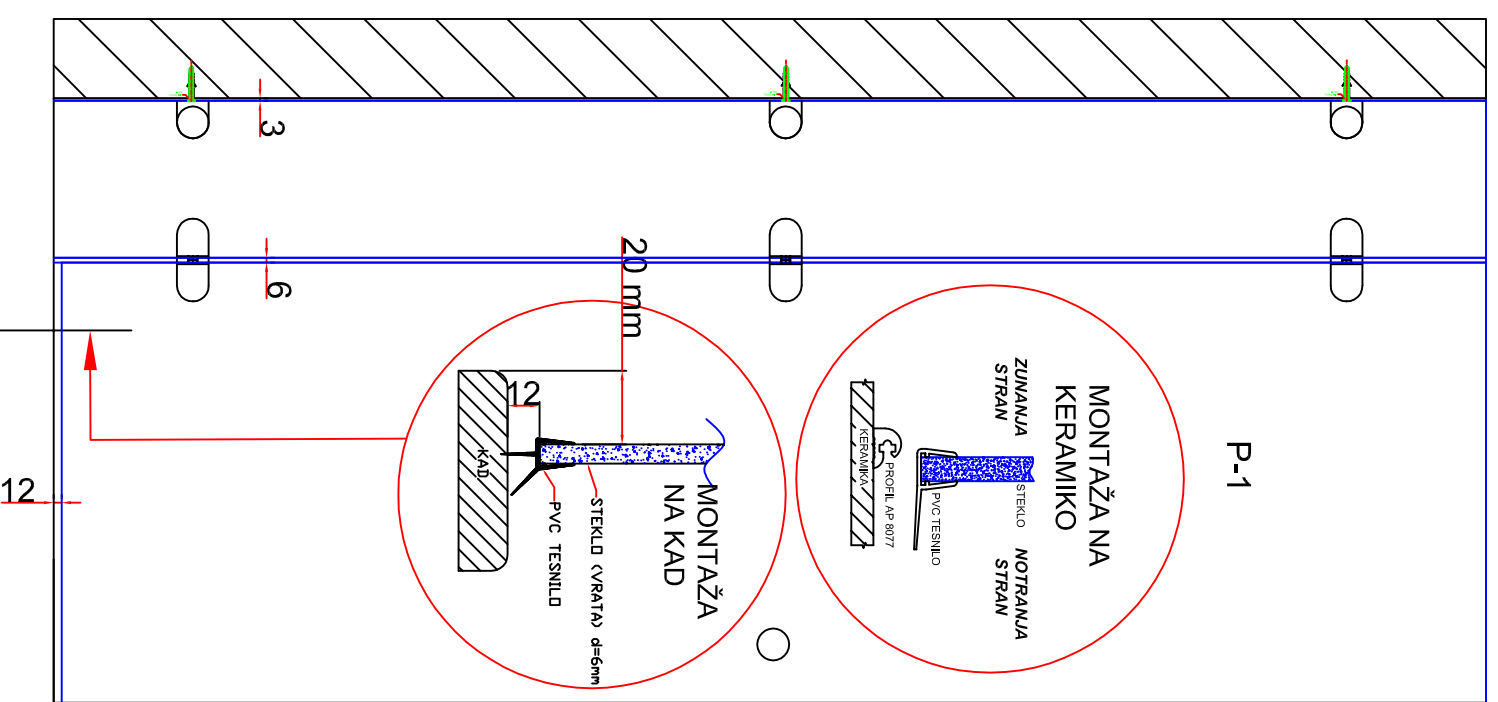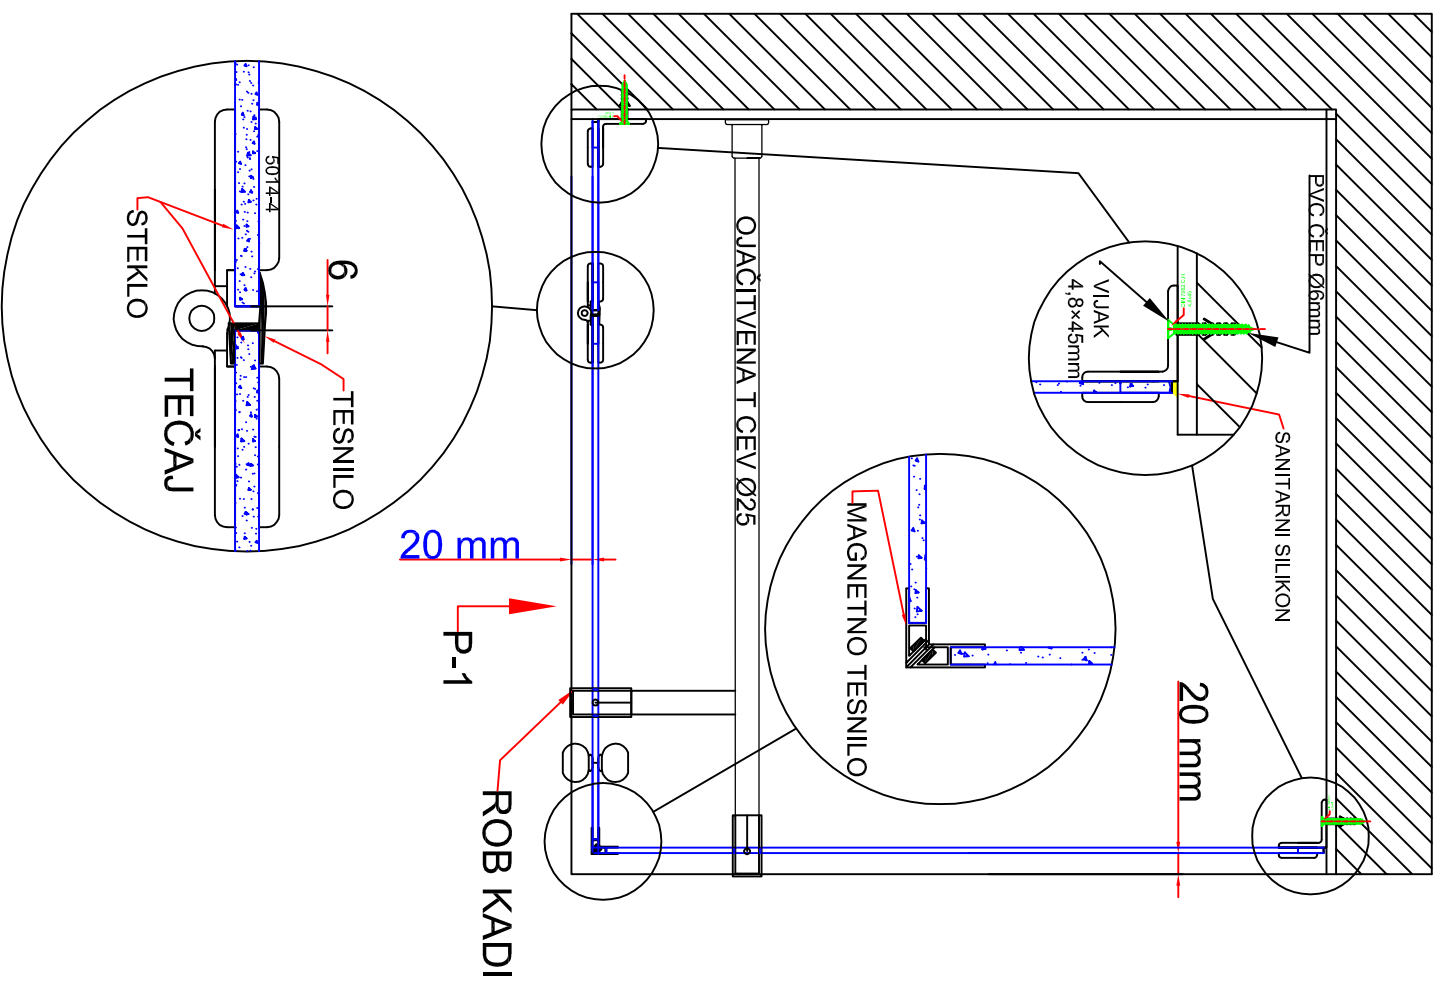

Navodilo za montažo TAI 2

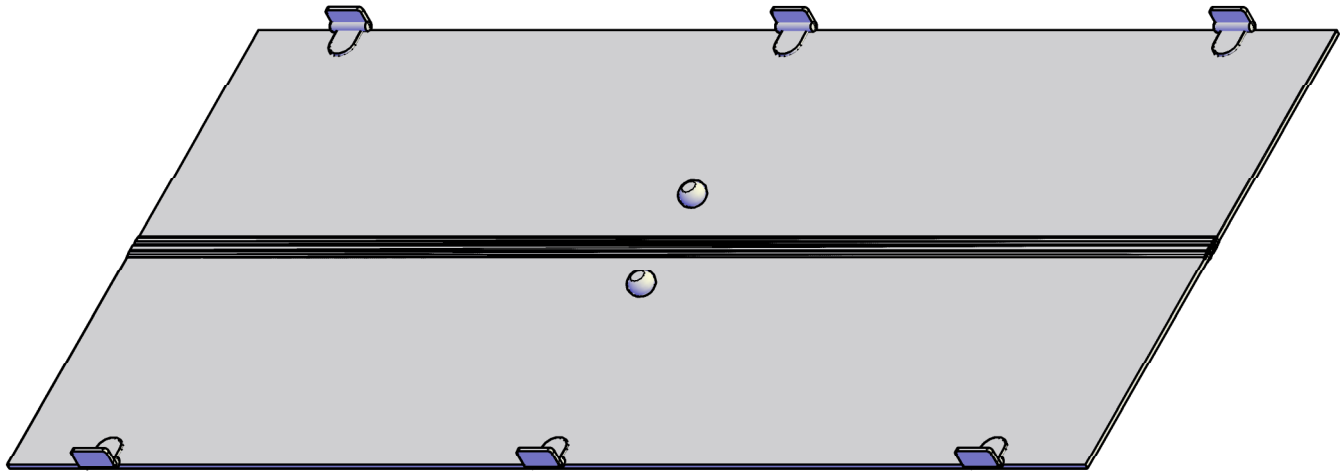

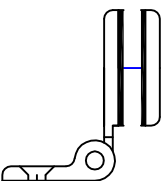L-700 TAI		
 VILAK 4,8x45	12	KOS
 PVC VLOŽEK Ø6	12	KOS
 ROČAJ	4	KOS
 TEČAJ 5014-3	6	KOS

Navodilo za montažo TAI 2

